
 
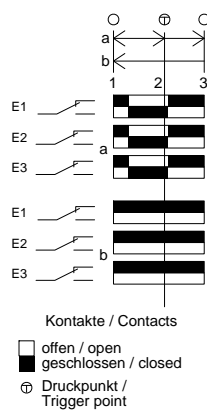


Technische Änderungen vorbehalten, alle Angaben ohne Gewähr / Subject to technical modifications; no responsibility is accepted for the accuracy of this information. © EUCHNER GmbH + Co. KG




**S1**  
Drucktaste schwarz  
push button black

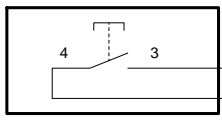


WH ws  
BN br

**S2**  
Drucktaste weiss  
push button white

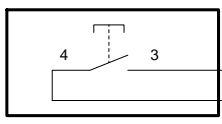

GN gn  
YE ge

**S3**  
Zustimmtaster  
enabling push button

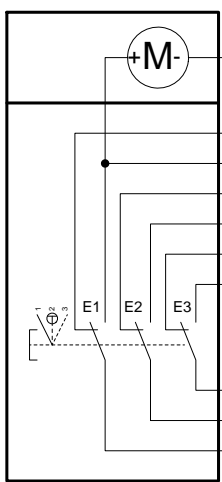

LP3 0V GY gr  
LP1  
LP2  
LP10 PK rs  
LP9 BU bl  
LP11  
LP12 RD rt  
LP13 BK sw  
LP8 VT vi  
LP5 +24V GYPK grss

Ader  
nicht angeschlossen/  
wire  
not connected:

RDBU rtbl

Schirm / shield

Adern / wires 12x 0,14<sup>2</sup>