

EUCHNER

Operating Instructions

Transponder-Coded Safety Switch with Guard Locking
CTP-AP-...-EX Unicode/Multicode

EN

Contents

1.	About this document	4
1.1.	Scope	4
1.1.1.	Type label	4
1.2.	Target group	4
1.3.	Key to symbols	4
1.4.	Supplementary documents	5
2.	Correct use	5
3.	Description of the safety function	6
4.	Explosion protection safety concept	7
4.1.	Explosion protection for version with escape release	8
4.2.	Explosion protection when using bolt BTM-UNIP-S-TH	8
5.	Exclusion of liability and warranty	9
6.	General safety precautions	9
7.	Function	10
7.1.	Guard lock monitoring	10
7.2.	Door monitoring output (OD)	10
7.3.	Diagnostic output (OI)	10
7.4.	Guard lock monitoring output (OL)	10
7.5.	Guard locking on version CTP-L1-...-EX	10
7.6.	Guard locking on version CTP-L2-...-EX	11
7.7.	Switching states	11
8.	Manual release	12
8.1.	Auxiliary release	12
8.1.1.	Actuating auxiliary release	12
8.2.	Escape release (optional)	12
8.2.1.	Actuating escape release	13
9.	Changing the approach direction	13
10.	Mounting	14
11.	Electrical connection	15
11.1.	Notes about UL	16
11.2.	Safety in case of faults	16
11.3.	Fuse protection for power supply	16
11.4.	Requirements for connecting cables	17
11.5.	Connector assignment of safety switch CTP-...-AP-...-SAB-... with plug connectors 2 x M12	18
11.6.	Connector assignment of safety switch CTP-...-AP-...-SA-... with plug connector M12, 8-pin	18

11.7. Connection of CTP-AP-...-EX.....19

11.8. Notes on operation with safe control systems.....20

11.9. Connection of guard locking control21

11.9.1. Guard locking control for variants with IMM connection21

11.9.2. Guard locking control for variants without IMM connection.....21

12. Setup 22

12.1. LED displays22

12.2. Teach-in function for actuator (only for unicode evaluation)22

12.2.1. Actuator teach-in.....23

12.3. Functional check.....23

12.3.1. Mechanical function test23

12.3.2. Electrical function test.....23

13. System status table 24

14. Technical data 25

14.1. Technical data for safety switch CTP-AP-...-EX.....25

14.1.1. Typical system times.....26

14.2. Radio frequency approvals.....27

14.3. Dimension drawing for safety switch CTP-...-EX.....28

14.4. Technical data for actuator CTP-...-EX29

14.4.1. Dimension drawing for actuator CTP-...-EX.....29

15. Ordering information and accessories 31

16. Inspection and service 31

17. Service 31

18. Declaration of conformity 31

1. About this document

1.1. Scope


These operating instructions are valid for all CTP-L-AP-...-EX of version V1.2.X. These operating instructions, the document *Safety information* and any enclosed data sheet form the complete user information for your device.



Important!

Make sure to use the operating instructions valid for your product version. The version number can be found on the type label of your product. Please contact the EUCHNER service team if you have any questions.

1.1.1. Type label

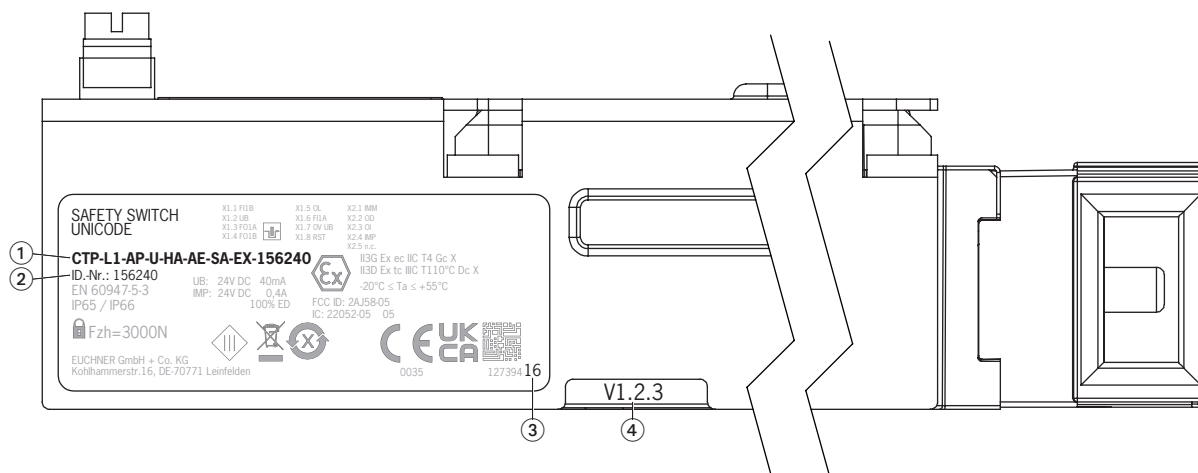

Key

1	Item designation
2	Order number
3	Year of manufacture
4	Version number

1.2. Target group

Design engineers and installation planners for safety devices on machines, as well as setup and servicing staff possessing special expertise in handling safety components.

1.3. Key to symbols

Symbol/depiction	Meaning
	Printed document
	Document is available for download at www.euchner.com
 DANGER WARNING CAUTION	Safety precautions Danger of death or severe injuries Warning about possible injuries Caution slight injuries possible
 NOTICE Important!	Notice about possible device damage Important information
Tip	Useful information

1.4. Supplementary documents

The overall documentation for this device consists of the following documents:

Document title (document number)	Contents	
Safety information (2525460)	Basic safety information	
Operating instructions (2127610)	(this document)	
Declaration of conformity	Declaration of conformity	
Possibly enclosed data sheet	Item-specific information about deviations or additions	



Important!

Always read all documents to gain a complete overview of safe installation, setup and use of the device. The documents can be downloaded from www.euchner.com. Simply enter the document number or the order number in the search box.

2. Correct use

Safety switches series CTP-L-... are interlocking devices with guard locking solenoid (type 4). The device meets the requirements according to EN IEC 60947-5-3. Devices with unicode evaluation possess a high coding level, devices with multicode evaluation possess a low coding level.

In combination with a movable guard and the machine control, this safety component prevents the guard from being opened while a dangerous machine function is being performed.

This means:

- Starting commands that cause a dangerous machine function must become active only when the guard is closed and locked.
- Guard locking must not be released until the dangerous machine function has ended.
- Closing and locking a guard must not cause automatic starting of a dangerous machine function. A separate start command must be issued. For exceptions, refer to EN ISO 12100 or relevant C-standards.

Devices from this series are also suitable for process protection.

Before the device is used, a risk assessment must be performed on the machine, e.g. in accordance with the following standards:

- EN ISO 13849-1
- EN ISO 12100
- IEC 62061
- EN 1127-1

Correct use includes observing the relevant requirements for installation and operation, particularly based on the following standards:

- EN ISO 13849-1
- EN ISO 14119
- EN 60204-1
- EN IEC 60079-0
- EN 60079-7
- EN 60079-11
- EN 60079-14
- EN 60079-31

The safety switch is allowed to be operated only in conjunction with the intended EUCHNER actuator and the related connection components from EUCHNER. If different actuators or other connection components are used, EUCHNER provides no warranty for safe function.



Important!

- › Devices with ATEX rating may be operated only with actuators that also have an ATEX rating for the same zone.
- › The user is responsible for the proper integration of the device into a safe overall system. For this purpose, the overall system must be validated, e.g. in accordance with EN ISO 13849-1.
- › It is only allowed to use components that are permissible in accordance with the table below.

Table 1: Possible combinations for CTP components

Safety switch	Actuator	
	A-C-H-...-EX	
CTP-...-EX Unicode/Multicode	●	
Key to symbols	●	Combination possible

3. Description of the safety function



NOTICE

Permissible connecting cables can be found at www.euchner.com. Enter the item number in the search box and go to the *Accessories* tab.

Devices from this series feature the following safety functions:

**Monitoring of guard locking and the position of the guard
(interlocking device with guard locking according to EN ISO 14119)**


- › Safety function (see chapter 7.7. *Switching states on page 11*):
 - The safety outputs are switched off when guard locking is released (monitoring of the locking element).
 - The safety outputs are switched off when the guard is open (monitoring of the door position).
 - Guard locking can be activated only when the actuator is located in the switch head (prevention of inadvertent locking position (faulty closure protection)).
- › Safety characteristics: category, Performance Level, PFH (see chapter 14. *Technical data on page 25*).

Control of guard locking

If the device is used as guard locking for personnel protection, control of guard locking must be regarded as a safety function.

The device does not feature a safety characteristic for control of guard locking, because the guard locking solenoid is completely disconnected from outside the device (no control function within the device). It therefore does not contribute to the failure probability.

The safety level for the control of guard locking is defined only by the external control (e.g. $PFH_{ext.}$ for the standstill monitor).

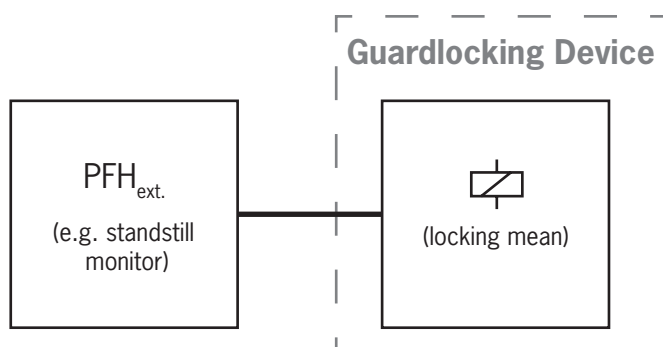

4. Explosion protection safety concept



Important!

- › In order to achieve the explosion protection stated, all the conditions in the operating instructions must be met.
- › Devices with ATEX rating may be operated only with actuators that also have an ATEX rating for the same zone.
- › Use connection components and connecting cables from EUCHNER.
- › The connecting cable must be laid so that it is protected against mechanical damage.
- › In addition, a mechanical barrier is to be provided on the connecting cable as per EN 60079-14, section 9.3.9, to prevent any flame propagation from the non-potentially explosive atmosphere to the potentially explosive atmosphere.



II3G Ex ec IIC T4 Gc X

II3D Ex tc IIC T110°C Dc X

... **Gc X** = All the electrical connections must either be isolated from the mains supply by a safety transformer according to IEC 61558-2-6 with limited output voltage in the event of a fault, or by other equivalent insulation measures (PELV).

... **Dc X** = To prevent electrostatic charging, do not subject the switch to any processes that generate a large amount of charge.

Safety switches with ATEX rating from EUCHNER are not safety devices as defined by the ATEX Directive.

The following components must be grounded:

- › Switch/protective plate
- › Actuator
- › Lockout bar

Actuators with rubber bushes must not be used.

Permanently and inseparably connect the actuator to the guard using the non-removable screws supplied.

It is essential the protective plate (conductive ESD protective paint) is mounted as shock protection.

Within the stipulated operating temperature, it is not to be expected that the explosive atmosphere will be drawn into the housing.

To prevent electrostatic charging, do not subject the switch to any processes that generate a large amount of charge.

All exposed ground connections must have a conductor cross-section of at least 4 mm².

The connecting cable must be laid so that it is protected against mechanical damage.

On use in potentially explosive atmospheres, there is a danger of explosion due to electrical sparks.

- › Never connect or disconnect terminal plugs when they are live.
- › The connecting cable must be laid rigidly; it is not permissible to lay the cable so that it can move (e.g. in a drag chain).

Do not operate the switch in an atmosphere containing combustible gases, such as:

- › Carbon disulfide
- › Carbon monoxide
- › Ethylene oxide.

Protection of the switch and actuator against material deposits.

Safety switches and actuators must not be used as an end stop.

Protection against mechanical effects on the switch: to achieve the indicated explosion protection, it is essential the protective plate supplied is mounted (ESD protective paint).


Mount the switch so that the rear side is completely covered (no shock protection).

An energy of 500 J must not be exceeded during insertion of the actuator.

Observe the max. approach speed (see chapter 14. *Technical data on page 25*) and the weight of the guard.

If damage or wear is found, the complete switch and actuator assembly must be replaced. Replacement of individual parts or assemblies is not permitted.

Do not open, service or repair in an area in which an explosive atmosphere may be present.

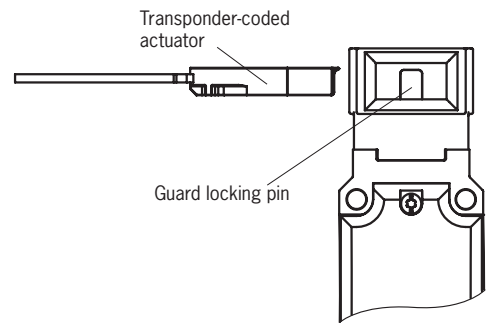

4.1. Explosion protection for version with escape release

It is essential to support the escape release using the supplied mounting plate.

The mounting plate must be grounded. For this purpose, the mounting plate must either be fastened on a grounded base material or mounted on the switch using the supplied M5 x 45 fixing screws with a chromium content of 16.5% or higher (ISO 14579) or equivalent screws. In either case, the grounding terminal must be connected to the protective plate of the switch.

After mounting, it must be checked that the escape release and the mounting plate are in electrical contact with the housing.

The escape release and the mounting plate consist of aluminum. To avoid sparking, mechanical collisions of machine parts with the escape release or the mounting plate must be ruled out.

4.2. Explosion protection when using bolt BTM-UNIP-S-TH

Only the bolt BTM-UNIP-S-TH-00-X-159951 may be used as the optional bolt. Bolts with escape release must not be used.

The bolt achieves the same explosion protection as the safety switch CTP-...-EX used in the combination.

Bolts are not subject to mandatory rating according to the ATEX Directive and ATEX standards. The bolt BTM-UNIP-S-TH-00-X-159951 has no ATEX rating. However, the specifications of the ATEX Directive and ATEX standards apply to bolts as well.

The bolt slide and switch bracket must be grounded. The bolt slide must be fastened on a grounded base material for this purpose. The switch bracket must either be fastened on a grounded base material or mounted on the switch using M5 x 40 fixing screws. In either case, the grounding terminal must be connected to the protective plate of the switch.

Mechanical collisions must be avoided to prevent sparking. For this purpose, the door must be checked periodically for misalignment and must be realigned if necessary.

In order to avoid sparking due to mechanically generated sparks and friction, all movements at the bolt must be performed at a maximum speed of 1 m/s.

The energy must not exceed 20 J when the bolt tongue is actuated.

To prevent electrostatic charging, do not subject the bolt to any processes that generate a large amount of charge.

5. Exclusion of liability and warranty

In case of failure to comply with the conditions for correct use stated above, or if the safety regulations are not followed, or if any servicing is not performed as required, liability will be excluded and the warranty void.

6. General safety precautions

Safety switches fulfill personnel protection functions. Incorrect installation or tampering can lead to fatal injuries to personnel.

Check the safe function of the guard particularly

- › after any setup work
- › after the replacement of a system component
- › after an extended period without use
- › after every fault.

Independent of these checks, the safe function of the guard should be checked at suitable intervals as part of the maintenance schedule.

	WARNING Danger to life due to improper installation or due to bypassing (tampering). Safety components fulfill a personnel protection function. › Safety components must not be bypassed, turned away, removed or otherwise rendered ineffective. On this topic pay attention in particular to the measures for reducing the possibility of bypassing according to EN ISO 14119:2025, section 8. › The switching operation must be activated only by actuators designated for this purpose. › Prevent bypassing by means of replacement actuators (only for multicode evaluation). For this purpose, restrict access to actuators and to keys for releases, for example. › Mounting, electrical connection and setup only by authorized personnel possessing the following knowledge: - specialist knowledge in handling safety components - knowledge about the applicable EMC regulations - knowledge about the applicable regulations on operational safety and accident prevention.
	Important! Prior to use, read the operating instructions and keep these in a safe place. Ensure the operating instructions are always available during mounting, setup and servicing. For this reason you should archive a printed copy of the operating instructions. You can download the operating instructions from www.euchner.com.

7. Function

The device permits the locking of movable guards.

The system consists of the following components: coded actuator (transponder) and switch.

Whether the device learns the complete actuator code (unicode) or not (multicode) depends on the respective version.

- **Devices with unicode evaluation:** The actuator must be assigned to the safety switch by a teach-in operation so that it is detected by the system. This unambiguous assignment ensures a particularly high level of protection against tampering. The system thus possesses a high coding level.
- **Devices with multicode evaluation:** Unlike systems with unicode evaluation, on multicode devices a specific code is not requested but instead it is only checked whether the actuator is of a type that can be detected by the system (multicode detection). There is no exact comparison of the actuator code with the taught-in code in the safety switch (unicode evaluation). The system possesses a low coding level.

When the guard is closed, the actuator is moved into the safety switch. When the operating distances are reached, power is supplied to the actuator by the switch and data are transferred.

If a permissible code is detected, the safety outputs are switched on.

The safety outputs and the monitoring output (OL) are switched off when the guard is unlocked.

In the event of a fault in the safety switch, the safety outputs are switched off and the DIA LED illuminates red. The occurrence of faults is detected at the latest on the next demand to close the safety outputs (e.g. on starting).

7.1. Guard lock monitoring

All versions feature two safe outputs for guard lock monitoring. The safety outputs (FO1A and FO1B) are switched off when guard locking is released.

7.2. Door monitoring output (OD)

The door monitoring output is switched on as soon as the actuator is inserted into the switch head (state: guard closed and not locked). The door monitoring output also remains switched on when guard locking is active.

7.3. Diagnostic output (OI)

The diagnostic output is switched on in the event of a fault (switch-on condition as for DIA LED).

7.4. Guard lock monitoring output (OL)

The guard lock monitoring output is switched on when guard locking is active.

7.5. Guard locking on version CTP-L1-...-EX

(guard locking actuated by spring force and released by power-ON)

Activating guard locking: close guard; no voltage at the solenoid.

Releasing guard locking: apply voltage to the solenoid.

The spring-operated guard locking functions in accordance with the closed-circuit current principle. If the voltage is interrupted at the solenoid, guard locking remains active and the guard cannot be opened directly.



Important!

If the guard is open when the power supply is interrupted and is then closed, guard locking is activated. This can lead to persons being locked in unintentionally.

The actuator cannot be pulled out of the switch and the guard is locked as long as the guard locking pin is extended.

If voltage is applied to the guard locking solenoid, the guard locking pin is retracted and the actuator is released. The guard can be opened.

7.6. Guard locking on version CTP-L2-...-EX

(guard locking actuated by power-ON and released by spring force)



Important!

Use as guard locking for personnel protection is possible only in special cases, after strict assessment of the accident risk (see EN ISO 14119:2025, section 6.6.1).

Activating guard locking: apply voltage to the solenoid.

Releasing guard locking: disconnect voltage from the solenoid.




The magnetically actuated guard locking operates in accordance with the open-circuit current principle. If the voltage is interrupted at the solenoid, guard locking is released and the guard can be opened directly.

The guard can be opened as long as no voltage is applied to the guard locking solenoid.

If the voltage is applied to the guard locking solenoid, the guard locking pin is held in the extended position and the guard is locked.

7.7. Switching states

The detailed switching states for your switch can be found in the system status table. All safety outputs, monitoring outputs and display LEDs are described there.

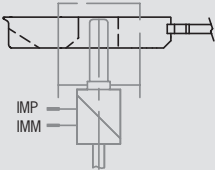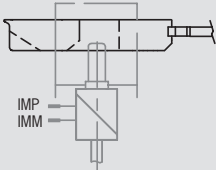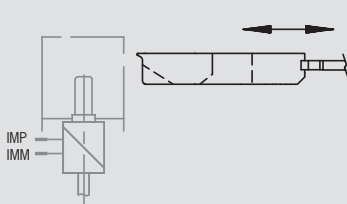	Guard closed and locked	Guard closed and not locked	Guard open
			
Voltage on guard locking solenoid CTP-L1	off	on	(irrelevant)
Voltage on guard locking solenoid CTP-L2	on	off	(irrelevant)
Safety outputs F01A and F01B 	on	off	off
Guard lock monitoring output OL	on	off	off
Door monitoring output OD	on	on	off

8. Manual release

Some situations require guard locking to be released manually (e.g. malfunctions or an emergency). A function test should be performed after release.

Further information on this topic can be found in the standard EN ISO 14119:2025, section 7.2.3. The device can feature the following release functions:

8.1. Auxiliary release

In the event of malfunctions, the guard locking can be released with the auxiliary release irrespective of the state of the solenoid.

The safety outputs are switched off when the auxiliary release is actuated. Use the safety outputs to generate a stop command.

The monitoring output OL is switched off; OD can assume an undefined state. Open the guard and close it again after re-setting the auxiliary release. The device will then operate normally again.

8.1.1. Actuating auxiliary release


1. Unscrew locking screw.
2. Using a screwdriver, turn the auxiliary release to  in the direction of the arrow.

➔ Guard locking is released.



Important!

- › To prevent tampering, the auxiliary release must be sealed with sealing lacquer, for example, before the switch is set up.
- › The actuator must not be under tensile stress during manual release.
- › After use, reset the auxiliary release and screw in and seal the locking screw (with sealing lacquer, for example).
- › Loss of the release function due to mounting errors or damage during mounting.
- › Check the release function every time after mounting.
- › Observe the notes on any enclosed data sheets.

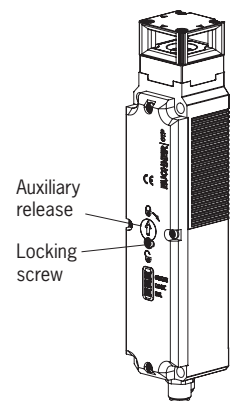


8.2. Escape release (optional)

This permits opening of a locked guard from the danger area without tools (see chapter FCC/IC-Requirements on page 27).



Important!

- › It must be possible to actuate the escape release manually from inside the protected area without tools.
- › It must not be possible to reach the escape release from the outside.
- › The actuator must not be under tensile stress during manual release.
- › The escape release meets the requirements of Category B according to EN ISO 13849-1.

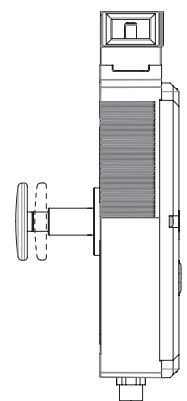

8.2.1. Actuating escape release

- › Press the red release knob to the end stop.
- ➔ Guard locking is released.

Pull the knob out again to reset.

The monitoring output OL is switched off; OD can assume an undefined state. Open the guard and close it again after re-setting the escape release. The device will then operate normally again.

9. Changing the approach direction

The approach direction needs to be changed only if the switch is to be approached from the rear.

Proceed as follows:

1. Remove the screws from the safety switch.
2. Set the required direction.
3. Tighten the screws with a torque of 1.2 Nm.

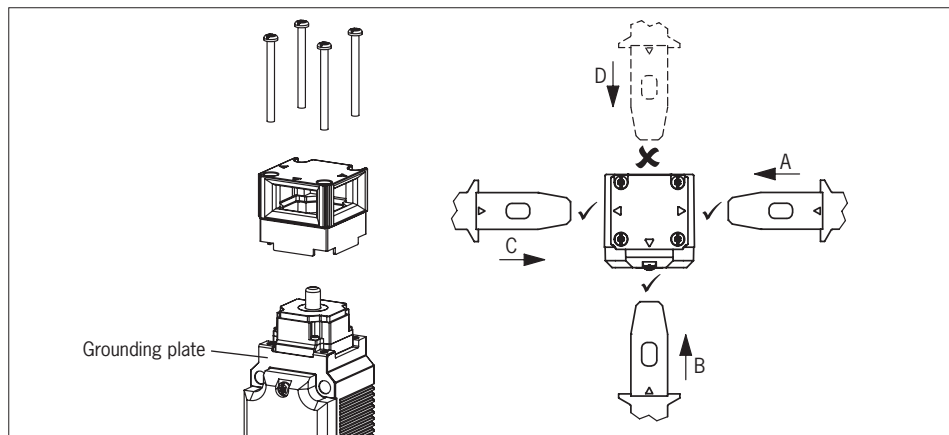


Fig. 1: Changing the approach direction



Important!

When changing the approach direction, make sure that the grounding plate is mounted correctly.

10. Mounting



WARNING

Danger of explosion due to improper mounting and use.

- › Do not operate the switch in an atmosphere containing combustible gases, such as:
 - Carbon disulfide
 - Carbon monoxide
 - Ethylene oxide.
- › Protection of the switch and actuator against material deposits.
- › Protection against mechanical effects on the switch:
 - To achieve the indicated explosion protection, it is essential the protective plate supplied is mounted (ESD protective paint).
 - Mount the switch so that the rear side is completely covered (no shock protection).
- › It is essential to mount the supplied mounting plate on versions with escape release.
- › Actuators with rubber bushes must not be used.
- › An energy of 500 J must not be exceeded during insertion of the actuator. Observe the max. approach speed (see technical data) and the weight of the guard.



CAUTION

Safety switches must not be bypassed (bridging of contacts), turned away, removed or otherwise rendered ineffective.

- › Observe EN ISO 14119:2025, section 8, for information about reducing the possibilities for bypassing an interlocking device.



NOTICE

Risk of damage to equipment and malfunctions as a result of incorrect installation.

- › Safety switches and actuators must not be used as an end stop.
- › The auxiliary release must be sealed before setup, e.g. with sealing lacquer.
- › Observe EN ISO 14119:2025, sections 6.2 and 6.3, for information about mounting the safety switch and the actuator.
- › Protect the switch head against damage, as well as penetrating foreign objects such as swarf, sand and blasting shot, etc.
- › Observe the min. door radii (see chapter 14.4.1. *Dimension drawing for actuator CTP-...-EX on page 29*).
- › Observe the tightening torque for mounting the switch (max. 1.4 Nm).

A clearance of 12 mm must be maintained around the actuator head (see Fig. 2).

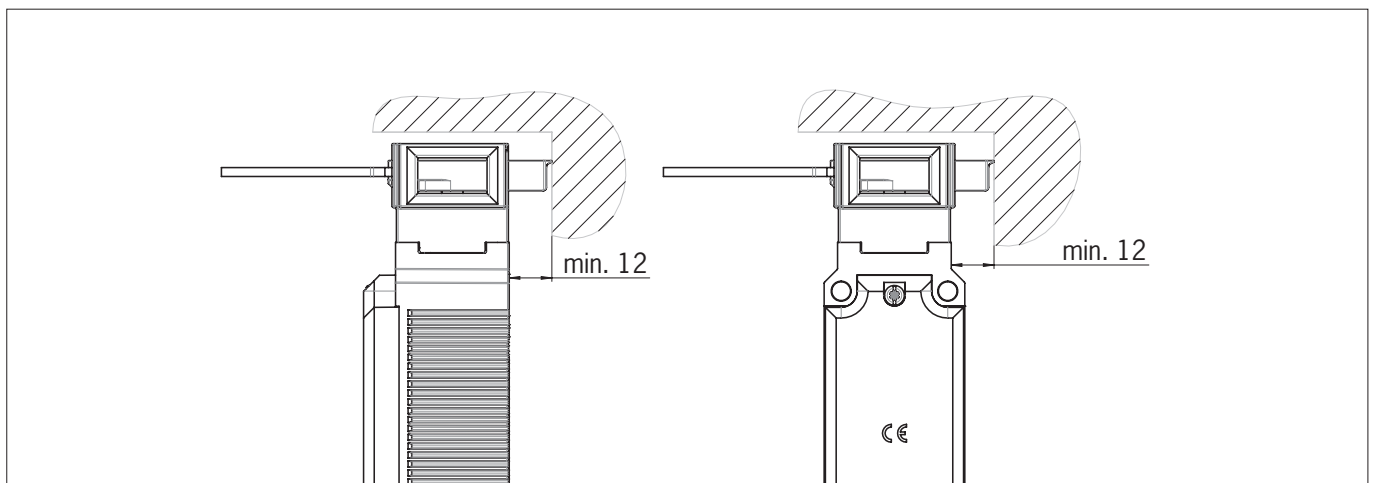


Fig. 2: Actuator head clearance

11. Electrical connection

	WARNING Danger of explosion due to improper connection. - Observe the following notes to avoid electrostatic charging: - All exposed ground connections must have a conductor cross-section of at least 4 mm². - The following components must be grounded: - Switch/protective plate - Actuator - Lockout bar. - The connecting cable must be laid so that it is protected against mechanical damage.
	WARNING In the event of a fault, loss of the safety function due to incorrect connection. - To ensure safety, both safety outputs (FO1A and FO1B) must always be evaluated. - Monitoring outputs must not be used as a safety output. - Lay the connecting cables with protection to prevent the risk of short circuits.
	WARNING On use in potentially explosive atmospheres, there is a danger of explosion due to electrical sparks. Never connect or disconnect terminal plugs when they are live.
	CAUTION Risk of damage to equipment or malfunctions as a result of incorrect connection. - The power supply for the evaluation electronics is isolated from the power supply for the guard locking solenoid. - The device generates its own test pulses on the output lines FO1A/FO1B. A downstream control system must tolerate these test pulses, which may have a length of up to 0.35 ms. Depending on the inertia of the downstream device (control system, relay, etc.), this can lead to short switching processes. - The inputs on an evaluation unit connected must be positive-switching, as the two outputs on the safety switch deliver a level of +24 V in the switched-on state. - All the electrical connections must either be isolated from the mains supply by a safety transformer according to IEC 61558-2-6 with limited output voltage in the event of a fault, or by other equivalent isolation measures (PELV). - All electrical outputs must have an adequate protective circuit for inductive loads. The outputs must be protected with a free-wheeling diode for this purpose. RC interference suppression units must not be used. - Power devices which are a powerful source of interference must be installed in a separate location away from the input and output circuits for signal processing. The cable routing for safety circuits should be as far away as possible from the cables of the power circuits. - To avoid EMC interference, the physical environmental and operating conditions at the installation site of the device must comply with the requirements according to the standard EN 60204-1:2006 (EMC). - Pay attention to any interference fields from devices such as frequency converters or induction heating systems. Observe the EMC instructions in the manuals from the respective manufacturer.
	Important! If the device does not appear to function when operating voltage is applied (e.g. green STATE LED does not flash), the safety switch must be returned unopened to the manufacturer.

11.1. Notes about UL



Important!

- › This device is intended to be used with a Class 2 power source in accordance with UL1310. As an alternative an LV/C (Limited Voltage/Current) power source with the following properties can be used:
 - This device shall be used with a suitable isolating source in conjunction with a fuse in accordance with UL248. The fuse shall be rated max. 3.3 A and be installed in the max. 30 V DC power supply to the device in order to limit the available current to comply with the UL requirements. Please note possibly lower connection ratings for your device (refer to the technical data).
- › For use and application in accordance with UL requirements ¹⁾, a connecting cable listed under the UL category code CYJV/7 must be used.

1) Note on the scope of the UL approval: the devices have been tested as per the requirements of UL508 and CSA/ C22.2 no. 14 (protection against electric shock and fire).

11.2. Safety in case of faults

- › The operating voltage UB and the solenoid voltage IMP are reverse polarity protected.
- › The safety outputs F01A/F01B are short circuit-proof.
- › A short circuit between F01A and F01B is detected by the switch.
- › A short circuit in the cable can be excluded by laying the cable with protection.

11.3. Fuse protection for power supply

The power supply must be provided with fuse protection depending on the number of switches and the current required for the outputs. The following rules apply:

Max. current consumption $I_{\max}$

$$I_{\max} = I_{UB} + I_{F01A+F01B} + I_{OL} + I_{OD}$$

$$I_{UB} = \text{Switch operating current (40 mA)}$$

$$I_{OL}/I_{OD} = \text{Load current of monitoring outputs (max. 50 mA per monitoring output)}$$

$$I_{F01A+F01B} = \text{Load current of safety outputs F01A + F01B (2 x max. 150 mA)}$$

11.4. Requirements for connecting cables



CAUTION

Risk of damage to equipment or malfunctions as a result of incorrect connecting cables.

- › Use connection components and connecting cables from EUCHNER.
- › If other connection components are used, the requirements in the following table apply. EUCHNER provides no warranty for safe function in case of failure to comply with these requirements.

Observe the following requirements with respect to the connecting cables:

For safety switch CTP-...-AP-...-SAB-... or CTP-...-AP-...SII with plug connectors 2 x M12


Parameter	Value	Unit
Conductor cross-section, min.	0.25	mm ²
R max.	60	Ω/km
C max.	120	nF/km
L max.	0.65	mH/km
Recommended cable type	LIYY 8 x 0.25 mm ² or 5 x 0.34 mm ²	

For safety switch CTP-...-AP-...-SA-... with plug connector M12, 8-pin

Parameter	Value	Unit
Conductor cross-section, min.	0.25	mm ²
R max.	60	Ω/km
C max.	120	nF/km
L max.	0.65	mH/km
Recommended cable type	LIYY 8x0.25 mm ²	

11.5. Connector assignment of safety switch CTP-...-AP-...-SAB-... with plug connectors 2 x M12


Wiring diagram A

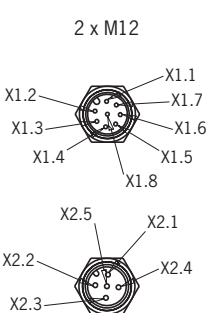Plug connector (view of connection side)	Pin	Designation	Function	Conductor coloring of connecting cable 1)
 2 x M12	X 1.1	-	n.c.	WH
	X 1.2	UB	AP electronics operating voltage, 24 V DC	BN
	X 1.3	F01A	Safety output, channel 1 	GN
	X 1.4	F01B	Safety output, channel 2 	YE
	X 1.5	OL	Guard lock monitoring output	GY
	X 1.6	-	n.c.	PK
	X 1.7	0 V UB	AP electronics operating voltage, 0 V	BU
	X 1.8	RST	Reset input	RD
	X 2.1	IMM	Guard locking solenoid operating voltage, 0 V	BN
	X 2.2	OD	Door monitoring output	WH
	X 2.3	OI	Diagnostic output	BU
	X 2.4	IMP	Guard locking solenoid operating voltage, 24 V DC	BK
	X 2.5	-	n.c.	GY

1) Only for standard EUCHNER connecting cable

11.6. Connector assignment of safety switch CTP-...-AP-...-SA-... with plug connector M12, 8-pin

Wiring diagram C

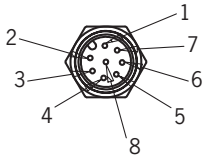Plug connector (view of connection side)	Pin	Designation	Function	Conductor coloring of connecting cable 1)
 1 x M12	1	IMP	Guard locking solenoid operating voltage, 24 V DC	WH
	2	UB	AP electronics operating voltage, 24 V DC	BN
	3	F01A	Safety output, channel 1 	GN
	4	F01B	Safety output, channel 2 	YE
	5	OI	Version with diagnostic output	GY
		OL	Version with guard lock monitoring output	
	6	OD	Door monitoring output	PK
	7	0 V UB	AP electronics operating voltage, 0 V	BU
	8	IMM	Guard locking solenoid operating voltage, 0 V	RD

1) Only for standard EUCHNER connecting cable

11.7. Connection of CTP-AP-...-EX

Connect the device as shown in *Fig. 3*. The monitoring outputs can be routed to a control system.

The following applies to devices with RST input: The switches can be reset using the RST input. To do this, a voltage of 24 V is applied to the RST input for at least 3 s. The RST input must be connected to 0 V if it is not used.

**WARNING**

In the event of a fault, loss of the safety function due to incorrect connection.

- ▶ To ensure safety, both safety outputs (FO1A and FO1B) must always be evaluated.



Important!

- › The example shows only an excerpt that is relevant for connection of the CTP system. The example illustrated here does not show complete system planning. The user is responsible for safe integration into the overall system. Detailed application examples can be found at www.euchner.com. Simply enter the order number of your switch in the search box. You will find all available connection examples for the device in *Downloads*.

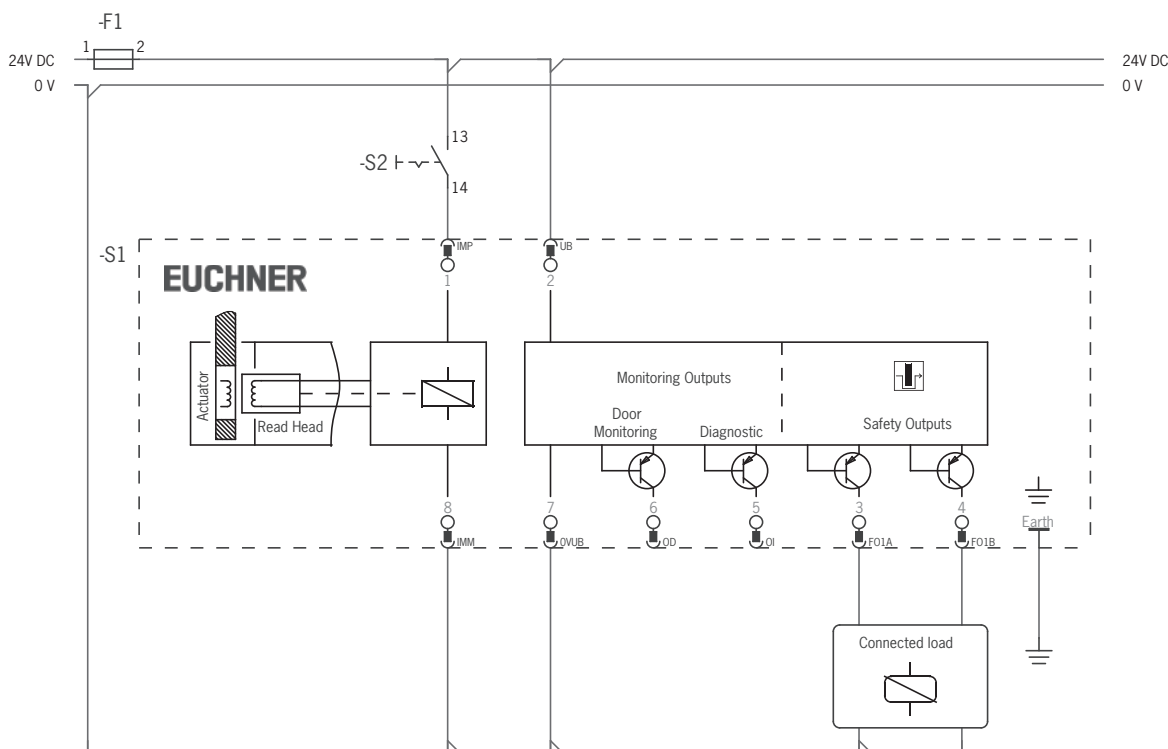


Fig. 3: Connection example, version with plug connector M12

11.8. Notes on operation with safe control systems

Observe the following guidelines for connection to safe control systems:

- › Use a common power supply for the control system and the connected safety switches.
- › The device tolerates voltage interruptions on UB of up to 5 ms. Tap the supply voltage directly from the power supply unit. If the power supply is connected to a terminal of a safe control system, this output must provide sufficient electrical current.
- › The safety outputs (FO1A and FO1B) can be connected to the safe inputs of a control system. Prerequisite: the input must be suitable for pulsed safety signals (OSSD signals, e.g. from light grids). The control system must tolerate test pulses on the input signals. This normally can be set up by parameter assignment in the control system. Observe the notes of the control system manufacturer. For the pulse duration of your safety switch, refer to chapter 14. *Technical data on page 25.*
- › The following applies to single-channel control of guard locking:
The guard locking (IMM) and the control system must have the same ground.
- › For dual-channel control of the solenoid voltage by safe outputs of a control system, the following points must be observed (see also Fig. 4 on page 20):
 - If possible, switch off the pulsing of the outputs in the control system.
 - Clock pulses up to a length of max. 5 ms are tolerated.

A detailed example of connecting and setting the parameters of the control system is available for many devices at www.euchner.com, in the area *Downloads/Applications/CTP*. The features of the respective device are dealt with there in greater detail.

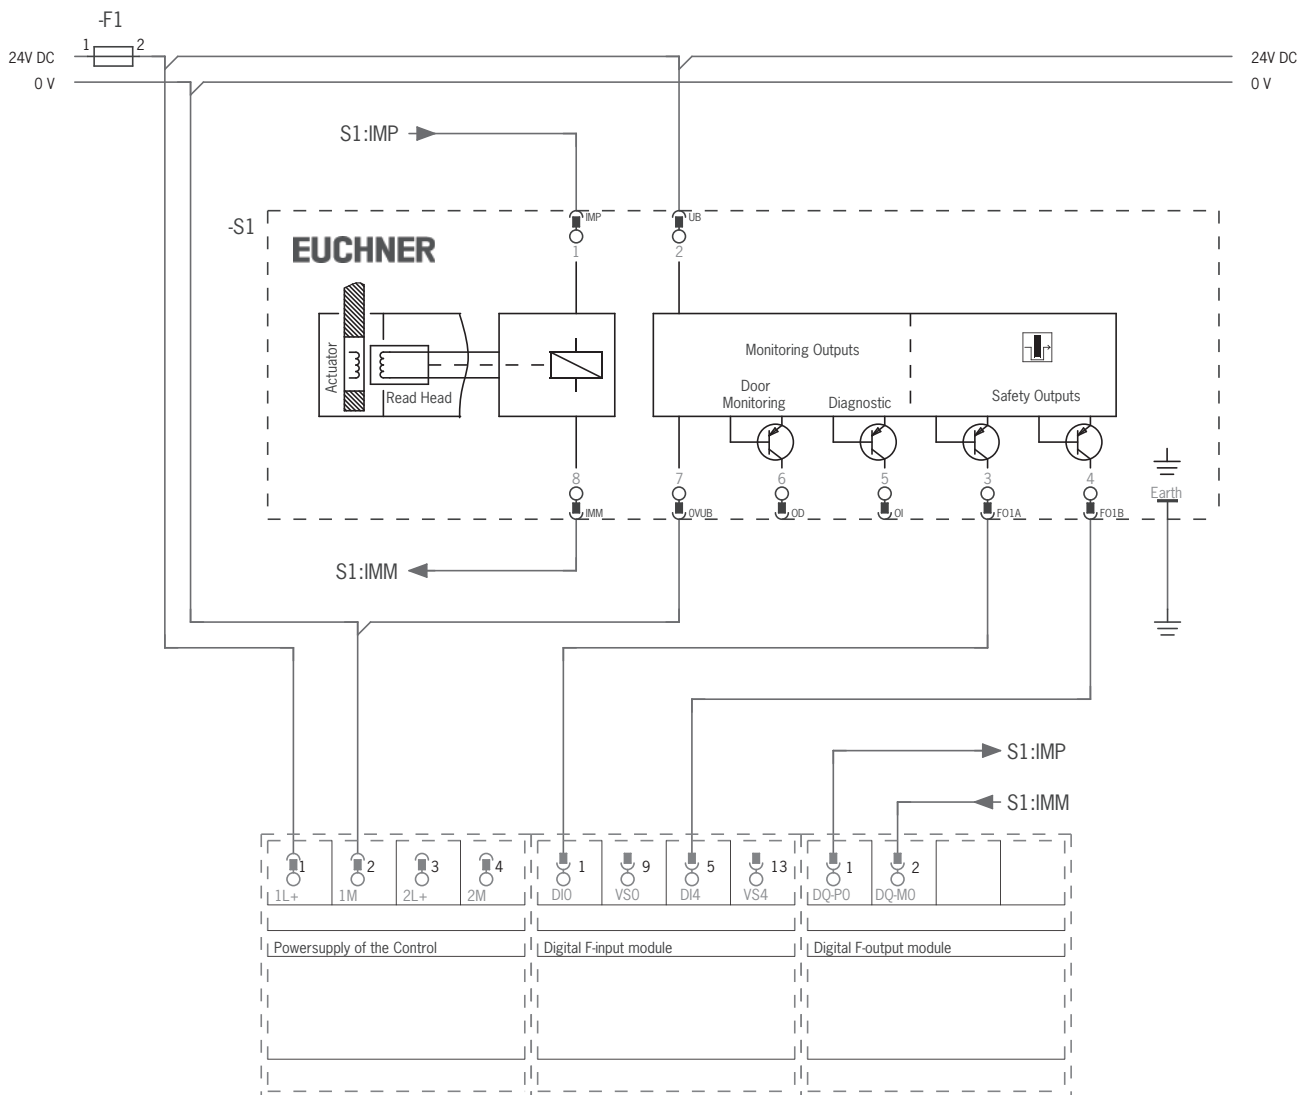


Fig. 4: Connection example for the connection to ET200

11.9. Connection of guard locking control

11.9.1. Guard locking control for variants with IMM connection

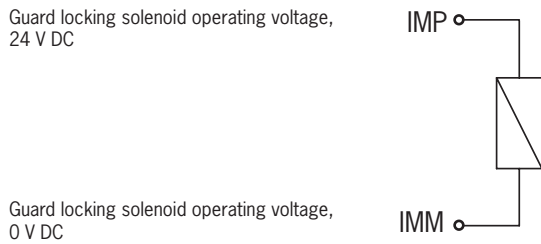


Fig. 5: Connection example with IMM connection

11.9.2. Guard locking control for variants without IMM connection

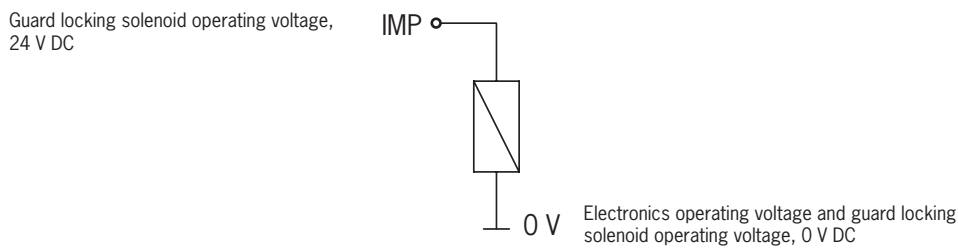



Fig. 6: Connection example without IMM connection

12. Setup

12.1. LED displays

You will find a detailed description of the signal functions in chapter 13. *System status table on page 24.*

LED	Color
STATE	green
LOCK	yellow
DIA	red

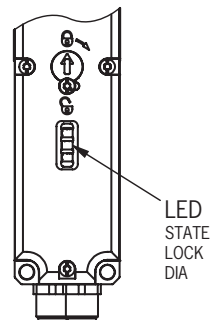

12.2. Teach-in function for actuator (only for unicode evaluation)

The actuator must be allocated to the safety switch using a teach-in function before the system forms a functional unit.

During a teach-in operation, the safety outputs are switched off, i.e. the system is in the safe state.

The teach-in operation is automatic. The number of possible teach-in operations is unlimited.



Tip!

Prior to switching on, close the guard on which the actuator to be taught-in is installed. The teach-in operation starts immediately after switching on. This feature simplifies above all teach-in with series connections and on large installations.



Important!

- › The teach-in operation can be performed only if the device does not have any internal fault.
- › Devices in the condition as supplied remain in teach-in standby until they have successfully taught-in the first actuator. Once taught-in, switches remain in teach-in standby for approx. 3 min. after each switch-on.
- › The safety switch disables the code of the preceding device if teach-in is carried out for a new actuator. Teach-in is not possible again immediately for this device if a new teach-in operation is carried out. The disabled code is enabled again in the safety switch only after a third code has been taught-in.
- › The safety switch can be operated only with the last actuator taught-in.
- › If the switch detects the actuator that was most recently taught-in when in teach-in standby, this state is ended immediately and the switch changes to normal operation.
- › The actuator being taught is not activated if it is within the actuating range for less than 30 s.

12.2.1. Actuator teach-in

1. Establish teach-in standby:
 - Devices in the condition as supplied: unlimited teach-in standby after switching on.
 - Switch already taught-in: teach-in standby is available for approx. 3 min. after switching on.
- ➔ Teach-in standby indication, STATE LED flashes 3x repeatedly.
2. Insert the actuator during teach-in standby.
 - ➔ The automatic teach-in operation starts (duration approx. 30 s).
During the teach-in operation, the STATE LED flashes (approx. 1 Hz).
Alternate flashing of the STATE and DIA LEDs acknowledges the successful teach-in operation.
Teach-in errors are indicated by the illumination of the red DIA LED and a flashing code of the green STATE LED (see chapter 13. *System status table on page 24*).
3. Switch off operating voltage UB (min. 3 s).
 - ➔ The code of the actuator that was just taught-in is activated in the safety switch.
4. Switch on operating voltage UB.
 - ➔ The device operates normally.

12.3. Functional check



WARNING

- Danger of fatal injury as a result of faults in installation and the functional check.
- Before carrying out the functional check, make sure that there are no persons in the danger area.
 - Observe the valid accident prevention regulations.

12.3.1. Mechanical function test

The actuator must slide easily into the actuating head. Close the guard several times to check the function. For devices with mechanical release (emergency release or escape release), the correct function of the release must be checked as well.

12.3.2. Electrical function test

After installation and any fault, the safety function must be fully checked. Proceed as follows:

1. Switch on operating voltage.
 - ➔ The machine must not start automatically.
 - ➔ The safety switch carries out a self-test. The green STATE LED then flashes at regular intervals.
2. Close all guards. In case of guard locking by solenoid force: activate guard locking.
 - ➔ The machine must not start automatically. It must not be possible to open the guard.
 - ➔ The green STATE LED and the yellow LOCK LED are illuminated continuously.
3. Enable operation in the control system.
 - ➔ It must not be possible to deactivate guard locking as long as operation is enabled.
4. Disable operation in the control system and deactivate guard locking.
 - ➔ The guard must remain locked until there is no longer any risk of injury.
 - ➔ It must not be possible to start the machine as long as guard locking is deactivated.

Repeat steps 2 - 4 for each guard.

13. System status table

Operating mode	Actuator/door position	Safety outputs F01A and F01B	Guard lock monitoring output OL	Door monitoring output OD	LED indicator Output		LOCK (yellow)	State
					STATE (green)	D/A (red) and diagnostic output OI		
Normal operation	closed	on	on	on		○		Normal operation, door closed and locked
	closed	off	off	on	1 x in-verse	○	○	Normal operation, door closed and not locked
	open	off	off	off	1 x	○	○	Normal operation, door open
Teach-in operation (only unicode)	open	off	off	off	3 x	○	○	Device in teach-in standby
	closed	off	X	on	1 Hz	○	○	Teach-in operation
	X	off	X	X	↔	○	○	Positive acknowledgment after completion of teach-in operation
Fault display	X	off	X	X	1 x		○	Fault in teach-in operation (only unicode) Actuator removed from the actuating range prior to the end of the teach-in operation or faulty actuator detected.
	X	off	off	off	2 x		○	Input error Test pulses on the safety outputs cannot be read due to asynchronous test pulses on UB.
	X	off	off	off	3 x		○	Read error (e.g. actuator faulty)
	X	off	off	off	4 x		○	Output error (e.g. short circuit, loss of switching ability)
	X	off	X	X	5 x		○	Disabled actuator detected
	X	off	off	off	○		X	Internal fault
Key to symbols	○							LED not illuminated
								LED illuminated
	10 Hz (8 s)							LED flashes for 8 s at 10 Hz
	3 x							LED flashes three times, and this is then repeated
	↔							LEDs flash alternately
	X							Any state

After the cause has been remedied, faults can generally be reset by opening and closing the guard. If the fault is still displayed afterward, use the reset function or briefly interrupt the power supply. Contact the manufacturer if the fault could not be reset after restarting.



Important!

If you do not find the displayed device status in the system status table, this indicates an internal device fault. In this case, you should contact the manufacturer.

14. Technical data



NOTICE

If a data sheet is available for the product, the information on the data sheet applies.

14.1. Technical data for safety switch CTP-AP-...-EX

Parameter	Value			Unit
	min.	typ.	max.	
General				
Material - Switch head - Switch housing - Protective plate - Mounting plate (for switches with escape release)	Die-cast zinc Reinforced thermoplastic Stainless steel Aluminum			
Installation position	Any			
Degree of protection	IP65/IP66 (screwed tight with the related mating connector)			
Safety class	III			
Degree of contamination	3			
Mechanical life	1 x 10 ⁶ operating cycles			
Ambient temperature at UB = 24 V	-20	-	+55	°C
Actuator approach speed, max.	20			m/min.
Actuating/extraction/retention force at 20 °C	10/20/20			N
Locking force F _{max} ¹⁾	3,900			N
Locking force F _{Zh} ¹⁾	F _{Zh} = F _{max} /1.3 = 3,000			N
Connection (depending on version)	2 plug connectors M12, 5- and 8-pin / 1 plug connector M12, 8-pin			
Operating voltage UB (reverse polarity protected, regulated, residual ripple <5%)	24 ± 15% (PELV)			V DC
Current consumption I _{UB}	40			mA
The following applies to the approval acc. to UL	Operation only with UL class 2 power supply or equivalent measures			
Switching load acc. to UL	DC 24 V, class 2			
External fuse (operating voltage UB) ²⁾	0.25	-	8	A
External fuse (solenoid operating voltage IMP) ²⁾	0.5	-	8	A
Rated insulation voltage U _i	-	-	50	V
Rated impulse withstand voltage U _{imp}	-	-	0.5	kV
Rated conditional short-circuit current	100			A
Shock and vibration resistance	Acc. to EN 60947-5-3			
EMC protection requirements	acc. to EN 60947-5-3			
Ready delay	-	-	1	s
Risk time	-	-	260	ms
Turn-on time	-	-	400	ms
Discrepancy time	-	-	10	ms
Test pulse duration	0.35			ms
Frequency band	120 ... 130			kHz
Safety outputs F01A/F01B Semiconductor outputs, p-switching, short circuit-proof				
- Output voltage U _{F01A} /U _{F01B} ³⁾ HIGH U _{F01A} /U _{F01B} LOW U _{F01A} /U _{F01B}	UB - 1.5 0	- -	UB 1	V DC
Switching current per safety output	1	-	150	mA
Utilization category acc. to EN 60947-5-2	DC-13 24 V 150 mA Caution: outputs must be protected with a free-wheeling diode in case of inductive loads			
Switching frequency ⁴⁾	0.5			Hz
Monitoring outputs OL, OI, OD p-switching, short circuit-proof				
Output voltage	0.8 x UB	-	UB	V DC
Max. load	-	-	50	mA
Solenoid				
Solenoid operating voltage IMP (reverse polarity protected, regulated, residual ripple < 5%)	DC 24 V +10%/-15%			
Solenoid current consumption I _{IMP}	400			mA
Connection rating	6			W
Duty cycle	100			%

Parameter	Value			Unit
	min.	typ.	max.	
Reliability values acc. to EN ISO 13849-1				
Mission time	20			years
Monitoring of guard locking and the guard position				
Category	4			
Performance Level (PL)	e			
PFH	4.1 x 10 ⁻⁹ /h			
Control of guard locking				
Category	Depends on external control			
Performance Level (PL)				
PFH				
ATEX rating				
Ex II3G Ex ec IIC T4 Gc X II3D Ex tc IIIC T110°C Dc X				

- 1) Dependent on the actuator used
2) Trip characteristic medium slow-blow
3) Values at a switching current of 50 mA without taking into account the cable lengths
4) Corresponds to the actuation frequency

14.1.1. Typical system times

Refer to the technical data for the exact values.

Ready delay: After switch-on, the device carries out a self-test. The system is ready for operation only after this time.

Turn-on time of safety outputs: The max. reaction time t_{on} is the time from the moment when the guard is locked to the moment when the safety outputs switch on.

Risk time according to EN 60947-5-3: If an actuator moves outside the actuating range, the safety outputs (FO1A and FO1B) are switched off after the risk time at the latest.

Discrepancy time: The safety outputs (FO1A and FO1B) switch with a slight time offset. They have the same signal state no later than after the discrepancy time.

Test pulses at the safety outputs: The device generates its own test pulses on the safety outputs (FO1A and FO1B). A downstream control system must tolerate these test pulses.

This can usually be set up in the control systems by parameter assignment. If parameter assignment is not possible for your control system or if shorter test pulses are required, contact our support organization.

The test pulses are output only if the safety outputs are switched on.

14.2. Radio frequency approvals

FCC ID: 2AJ58-05

IC: 22052-05



FCC/IC-Requirements

This device complies with part 15 of the FCC Rules and with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Unique Identifier:

CTP-I-AR SERIES
CTP-I1-AR SERIES
CTP-I2-AR SERIES
CTP-IBI-AR SERIES
CTP-L1-AR SERIES
CTP-L2-AR SERIES
CTP-LBI-AR SERIES
CTP-I-AP SERIES
CTP-I1-AP SERIES
CTP-I2-AP SERIES
CTP-IBI-AP SERIES
CTP-L1-AP SERIES
CTP-L2-AP SERIES
CTP-LBI-AP SERIES

Responsible Party – U.S. Contact Information

EUCHNER USA Inc.

1665 N. Penny Lane
Schaumburg
Illinois 60173


+1 315 701-0315

+1 315 701-0319


info(at)euchner-usa.com

http://www.euchner-usa.com


14.3. Dimension drawing for safety switch CTP-...-EX

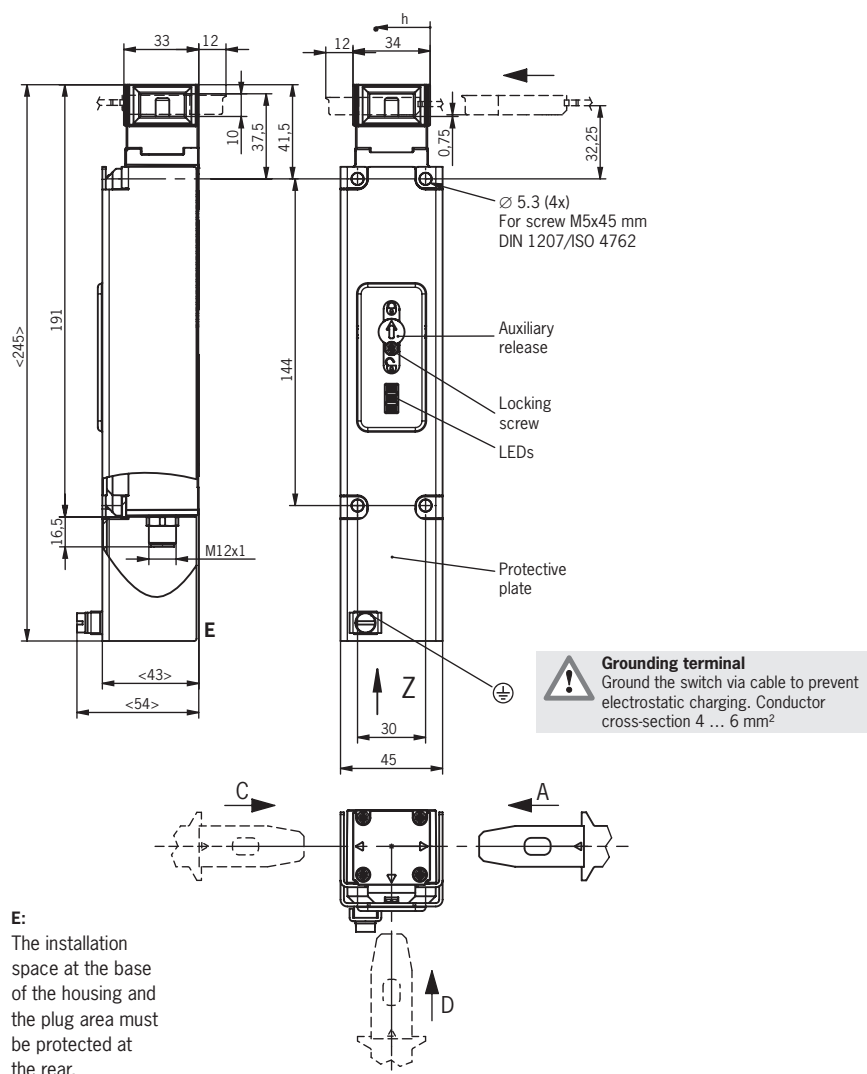

With escape release

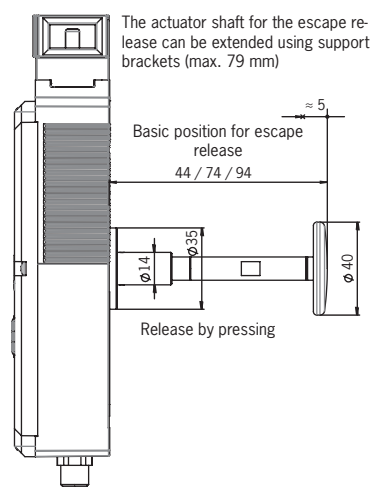

Mounting plate for escape release




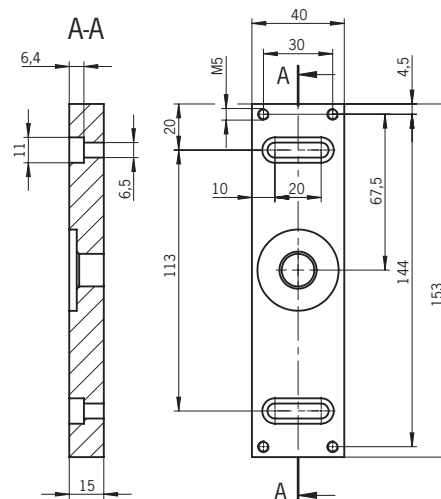


Fasten the mounting plate on the switch using the supplied M5 x 45 fixing screws with a chromium content of 16.5% (ISO 14579) or using equivalent screws.

14.4. Technical data for actuator CTP-...-EX

Parameter	Value			Unit	
	min.	typ.	max.		
Housing material	Fiber reinforced plastic				
Weight	0.03 ... 0.06 (depending on version)			kg	
Ambient temperature	-20	-	+55	°C	
Degree of protection	IP65/IP66				
Mechanical life	1 x 10 ⁶				
Locking force, max.				N	
- Straight actuator					3,900
- Hinged actuator					2,600
Installation position	Any				
Power supply	Inductive via read head				
ATEX rating					
 II3G Ex ic IIC T4 Gc II3D Ex ic IIC T110°C Dc X					

14.4.1. Dimension drawing for actuator CTP-...-EX

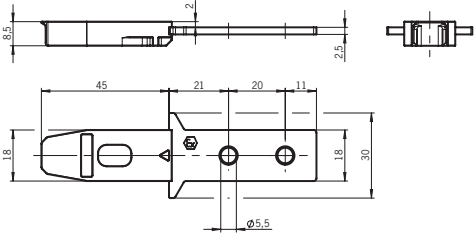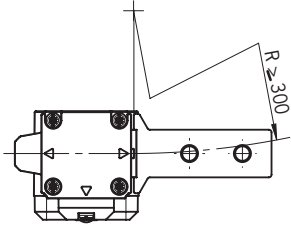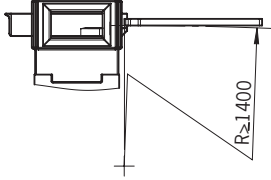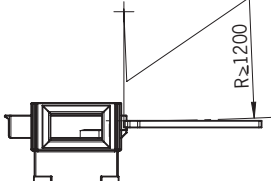Dimension drawing		Min. door radius [mm]	Order no./item
Straight actuators			136826 A-CHG-LSEX-136826
			

Dimension drawing		Min. door radius [mm]	Order no./item
Hinged actuators	Ground the actuator to prevent electrostatic charging.	166340 A-C-H-RL-LS-EX-166340	166341 A-C-H-RR-LS-EX-166341
	166340 A-C-H-RR-LS-EX-166340		
		Tip! Safety screws are included with the actuator.	

15. Ordering information and accessories



Tip!

Suitable accessories, e.g. cables or assembly material, can be found at www.euchner.com. To order, enter the order number of your item in the search box and open the item view. Accessories that can be combined with the item are listed in *Accessories*.

16. Inspection and service



WARNING

Danger of severe injuries due to the loss of the safety function.

- If damage or wear is found, the complete switch and actuator assembly must be replaced. Replacement of individual parts or assemblies is not permitted.
- Check the device for proper function at regular intervals and after every fault. For information about possible time intervals, refer to EN ISO 14119:2025, section 8.2.1.
- Do not open, service or repair in an area in which an explosive atmosphere may be present.
- Switches and actuators must be regularly freed of deposits and cleaned.
- Avoid electrostatic charging – clean only with a damp cloth.
- The safety door must be checked periodically for misalignment and must be realigned if necessary.

There is no test connection. Regular inspection of the following is necessary to ensure trouble-free long-term operation:

- Check the switching function (see chapter 12.3. *Functional check on page 23*)
- Check all additional functions (e.g. escape release, lockout bar, etc.)
- Check the secure mounting of the devices and the connections
- Check for contamination.

No servicing is required. Repairs to the device are only allowed to be made by the manufacturer.

17. Service

If servicing is required, please contact:

EUCHNER GmbH + Co. KG
Kohlhammerstraße 16
70771 Leinfelden-Echterdingen
Germany

Service telephone:

+49 711 7597-500

E-mail:

support@euchner.de

Internet:

www.euchner.com

18. Declaration of conformity

The product complies with the following requirements:

- Machinery Directive 2006/42/EC (until January 19, 2027)
- Machinery Regulation (EU) 2023/1230 (from January 20, 2027)
- Explosion Protection Directive (ATEX) 2014/34/EU

The EU declaration of conformity can be found at www.euchner.com. Enter the order number of your device in the search box. The document is available under *Downloads*.

Euchner GmbH + Co. KG
Kohlhammerstraße 16
70771 Leinfelden-Echterdingen
Germany
info@euchner.de
www.euchner.com

Edition:
2127610-06-06/26
Title:
Operating Instructions Transponder-Coded Safety Switch
CTP-AP-...EX (translation of the original operating instructions)
Copyright:
© EUCHNER GmbH + Co. KG, 06/2026

Subject to technical modifications; no responsibility is accepted for the accuracy of this information.