

Transponder-Coded Safety Switch with Guard Locking for Process Protection
CTS-C2-BP/BR-FLX High/Low Coding Level

Contents

1.	About this document.....	4
1.1.	Scope.....	4
1.1.1.	Type label CTS-C-BP/BR-FLX... ..	4
1.2.	Target group	4
1.3.	Key to symbols.....	4
1.4.	Supplementary documents	5
2.	Correct use	6
3.	Description of the safety function	8
4.	Exclusion of liability and warranty	8
5.	General safety precautions	8
6.	Function	10
6.1.	Guard lock monitoring for process protection	10
6.2.	Monitoring outputs/status bits	11
6.2.1.	Guard locking signal OL	11
6.2.2.	Door position 1 signal OD.....	11
6.2.3.	Door position 2 signal OT	11
6.2.4.	Diagnostic signal OI	11
6.2.5.	Escape release signal OER	11
6.2.6.	Status signal OM.....	11
6.2.7.	Locking element signal OLS.....	11
6.2.8.	Communication connection C.....	11
6.3.	Guard locking for process protection.....	12
6.4.	Switching states	12
7.	Manual release.....	13
7.1.	Auxiliary release.....	13
7.2.	Escape release.....	14
8.	Mounting.....	16
8.1.	General assembly instructions	16
8.2.	Mounting CTS-BP/BR	16
9.	Electrical connection	20
9.1.	Notes about UL	21
9.2.	Safety in case of faults.....	21
9.3.	Fuse protection for power supply	22
9.4.	Requirements for connecting cables.....	22
9.5.	Connector assignments.....	23
9.5.1.	Connector assignment of CTS-C2-...-AB-... with plug connectors 2 x M12	23
9.5.2.	Connector assignment of CTS-C2-...-BP-...-SA-... with plug connector M12, 8-pin.....	24
9.5.3.	Connector assignment of CTS-C2-...-BR-...-SA-... with plug connector M12, 8-pin.....	24
9.5.4.	Connector assignment of CTS-C2-...-VBB-... with plug connectors 2 x M12, 5-pin	25
9.6.	Notes on operation with safe control systems.....	26
9.7.	Connection without and with IO-Link communication.....	26

10.	Connection of a single CTS-C2-BP/BR-FLX (separate operation)	27
11.	Connection of several devices in a chain (series connection)	28
11.1.	Series connection with wiring in the control cabinet	28
11.2.	Series connection with Y-distributors	29
11.2.1.	Maximum cable lengths for BR switch chains with CTS-C2...-AB... with plug connectors 2 x M12	29
11.2.2.	Maximum cable lengths for BR switch chains with CTS-C2-BR...-SA with plug connector M12, 8-pin	30
11.2.3.	Connector assignment of Y-distributor for series connection without IO-Link communication	32
11.2.4.	Connector assignment of Y-distributor for series connection with IO-Link communication	34
12.	Using communication data	35
12.1.	Cyclical data (process data)	35
12.2.	Acyclical data (device data and events)	36
13.	Setup	38
13.1.	Configuring device and teaching-in actuator for the first time	38
13.2.	Teaching-in new actuator (only for evaluation of the actuator with a high coding level)	39
13.3.	Functional check	40
13.3.1.	Mechanical function test	40
13.3.2.	Electrical function test	40
14.	Factory reset	41
15.	Status and error messages	42
15.1.	LED displays	42
15.2.	Status messages	43
15.3.	Error messages	45
15.4.	Acknowledging error messages	47
16.	Technical data	48
16.1.	Technical data for safety switch CTS-C2-BP/BR-FLX	48
16.1.1.	Typical system times	50
16.1.2.	Radio frequency approvals	51
16.1.3.	Dimension drawing for safety switch CTS	52
16.1.4.	Dimension drawing for escape release CTS	52
16.2.	Technical data for actuator A-FLX-D-0	53
16.2.1.	Dimension drawing for actuator A-FLX-D-0	53
17.	Ordering information and accessories	54
18.	Inspection and service	54
19.	Disposal	54
20.	Service	54
21.	Declaration of conformity	55

1. About this document


1.1. Scope

These operating instructions are valid for all CTS-C2-BP/BR-FLX of version V2.0.X. These operating instructions, the document *Safety information* and any available data sheet form the complete user information for your device.

Important!	
	- Make sure to use the operating instructions valid for your product version. The version number can be found on the type label of your product. - Please contact the EUCHNER support team if you have any questions.

1.1.1. Type label CTS-C.-BP/BR-FLX...

(example illustration)

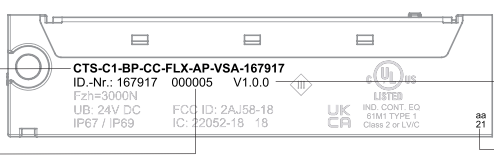 1: Serial number 2: Item designation 3: Year of manufacture 4: Product version	<table> <tr><td>1</td><td>Serial number</td></tr> <tr><td>2</td><td>Item designation</td></tr> <tr><td>3</td><td>Year of manufacture</td></tr> <tr><td>4</td><td>Product version</td></tr> </table>	1	Serial number	2	Item designation	3	Year of manufacture	4	Product version
1	Serial number								
2	Item designation								
3	Year of manufacture								
4	Product version								

1.2. Target group

Design engineers and installation planners for safety devices on machines, as well as setup and servicing staff possessing special expertise in handling safety components.

1.3. Key to symbols

Symbol/depiction	Meaning
	Guard position monitoring and active guard lock monitoring for process protection, high coding level
	Guard position monitoring and active guard lock monitoring for process protection, low coding level
	Guard position monitoring and optional guard lock monitoring for process protection, high coding level
	Guard position monitoring and optional guard lock monitoring for process protection, low coding level
	Printed document
	Document is available for download at www.euchner.com
	Warnings
DANGER	Danger of death or severe injuries
WARNING	Warning about possible injuries
CAUTION	Caution: slight injuries possible
	Notice about possible device damage
NOTICE	Important information
Important	Useful information
Tip	

1.4. Supplementary documents

The overall documentation for this device consists of the following documents:

Document title (document number)	Contents	
Safety information (2525460)	Basic safety information	
Operating instructions (MAN20001531)	(this document)	
Declaration of conformity	Declaration of conformity	
Possibly available data sheet	Item-specific information about deviations or additions	 

Important!	
	Always read all documents to gain a complete overview of safe installation, setup and use of the device. The documents can be downloaded from www.euchner.com . For this purpose, enter the doc. no. or the order number for the device in the search box.

2. Correct use

Safety switches series CTS-C2-BP/BR-FLX are interlocking devices with guard locking solenoid (type 4) for process protection without safe guard lock monitoring. The device complies with the requirements according to EN 60947-5-3.

The device can be configured with the aid of a function actuator. Depending on the function actuator taught-in, guard lock monitoring for process protection is permanently active or available as an additional option and the evaluation of the actuator code has a high or low coding level.

Table 1: System components

Safety switch	Function actuator			
	Guard lock monitoring for process protection			
	Active High coding level → L + HC	Optional High coding level → I + HC	Active Low coding level → L + LC	Optional Low coding level → I + LC
CTS-C2-BP/BR-FLX	A-FLX-D-0C-167919	A-FLX-D-0D-169044	A-FLX-D-0E-169045	A-FLX-D-0F-169046

→ L + ...

The following applies to active guard lock monitoring for process protection:

In combination with a movable guard and the machine control, this safety component prevents dangerous machine functions from occurring while the guard is open. A stop command is activated if the guard is opened during the dangerous machine function or guard locking is released.

This means:

- Starting commands that cause a dangerous machine function must become active only when the guard is closed and locked.
- Opening the guard must activate a stop command.
- Closing and locking a guard must not cause automatic starting of a dangerous machine function. A separate start command must be issued. For exceptions, refer to EN ISO 12100 or relevant C-standards.

→ I + ...

The following applies to optional guard lock monitoring for process protection:

In combination with a movable guard and the machine control, this safety component prevents dangerous machine functions from occurring while the guard is open. A stop command is activated if the guard is opened during the dangerous machine function.

This means:

- Starting commands that cause a dangerous machine function must become active only when the guard is closed.
- Opening the guard must activate a stop command.
- Closing a guard must not cause automatic starting of a dangerous machine function. A separate start command must be issued. For exceptions, refer to EN ISO 12100 or relevant C-standards.

→...+ HC

The following applies to evaluation of the actuator code with high coding level:

- The actuator must be assigned to the safety switch by a teach-in operation so that it is detected by the system. This unambiguous assignment ensures a particularly high level of protection against tampering. The system thus possesses a high coding level.

→...+ LC

The following applies to evaluation of the actuator code with low coding level:

- With the low coding level evaluation, a specific code is not requested but instead it is only checked whether the actuator is of a type that can be detected by the system. There is no exact comparison of the actuator code with the taught-in code in the safety switch. The system possesses a low coding level.

Before the device is used, a risk assessment must be performed on the machine, e.g. in accordance with the following standards:

- › EN ISO 13849-1
- › EN ISO 12100
- › EN IEC 62061

Correct use includes observing the relevant requirements for installation and operation, particularly based on the following standards:

- › EN ISO 13849-1
- › EN ISO 14119
- › EN 60204-1

The safety switch is allowed to be operated only in conjunction with the intended EUCHNER actuators and the related connection components from EUCHNER. On the use of different actuators or other connection components, EUCHNER provides no warranty for safe function.

Safety switches in the version CTS-...-BR can be integrated into a BR device chain. Connection of several devices in a BR device chain is permitted only using devices intended for series connection in a BR device chain. Check this in the specifications of the device in question.

Important!	
	› The user is responsible for the proper integration of the device into a safe overall system. For this purpose, the overall system must be validated, e.g. in accordance with EN ISO 13849-1. › It is only allowed to use components that are permissible in accordance with <i>Tab. 1 System components</i>.

3. Description of the safety function


Devices from this series feature the following safety functions:

Monitoring of the guard position (interlocking device according to EN ISO 14119)

- › Safety function: The safety outputs are switched off when the guard is open, see 6. *Function*, page 10.
- › Safety characteristics: category, Performance Level, PFH (see 16.1. *Technical data for safety switch CTS-C2-BP/BR-FLX*, page 48)

The following additionally applies in a BR series connection:

The safety outputs are switched on only when the device receives a corresponding signal from its predecessor in the chain.

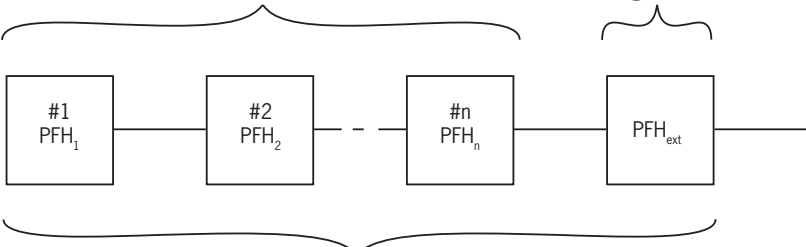Important! 	You can regard the complete BR device chain as one subsystem during calculation. The following calculation method applies to the PFH value: BR-Device #1 ... n External Evaluation (e.g. PLC)  $PFH_{ges} = \sum_{k=1}^n PFH_k + PFH_{ext}$
---	--

4. Exclusion of liability and warranty

The following points will result in exclusion of liability and loss of the warranty:

- › Incorrect use of the device
- › Failure to comply with the operating instructions and the safety regulations and warnings therein
- › Failure to perform the required check for correct function
- › Failure to perform the required servicing

5. General safety precautions

Safety switches fulfill personnel protection functions. Incorrect installation or tampering can lead to fatal injuries to personnel.

Check the safe function of the safeguard particularly after:

- › every setup
- › every replacement of a system component
- › extended downtime
- › any fault
- › any reconfiguration of the device.

Independent of these checks, the safe function of the guard must be checked at suitable intervals as part of service.


DANGER	
	Danger to life due to improper installation or due to bypassing (tampering). Safety components fulfill a personnel protection function. › Safety components must not be bypassed, turned away, removed or otherwise rendered ineffective. On this topic pay attention in particular to the measures for reducing the possibility of bypassing according to EN ISO 14119:2025, section 8. › Activate the switching operation using only the actuator designated for this purpose. › Ensure that bypassing by means of replacement actuators is not possible on switches with low coding level for evaluation. For this purpose, restrict access to actuators and keys for releases or similar. › Ensure that the guard cannot be closed unintentionally, e.g. during servicing. For this purpose, a lockout bar can be used, for instance. › Mounting, electrical connection and setup only by authorized personnel possessing the following knowledge: - specialist knowledge in handling safety components - knowledge about the applicable EMC regulations - knowledge about the applicable regulations on operational safety and accident prevention.
NOTICE	
	Risk of damage The guard locking function can no longer be ensured if an actuator is broken. Opening the door will immediately switch off the safety outputs. › Regularly check the actuator for mechanical damage.
Important!	
	Prior to use, read the operating instructions and keep these in a safe place. Ensure the operating instructions are always available during mounting, setup and servicing. You can download the operating instructions from www.euchner.com.

6. Function

The device monitors the position of movable guards.

The system consists of the following components:

- › Safety switch
- › Transponder-coded actuator

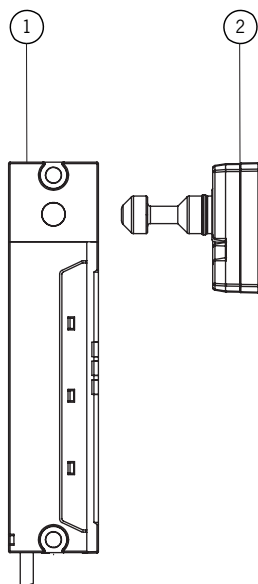

1	Safety switch
2	Transponder-coded actuator

The coding level of the system depends on the configuration of the device, see 13.1. *Configuring device and teaching-in actuator for the first time*, page 38.

When the guard is closed, the actuator is moved into the safety switch. When the operating distances are reached, power is supplied to the actuator by the switch and data are transferred.

The door position 1 signal OD is set if a permissible code is detected. Guard locking is activated automatically if voltage is present at the guard locking solenoid. The switching conditions for the safety outputs depend on the configuration of guard lock monitoring for process protection, see 6.4. *Switching states*, page 12.

If there is a fault in the safety switch, the safety outputs are switched off and the DIA LED illuminates or flashes red, see 15.3. *Error messages*, page 45. The occurrence of faults is detected at the latest on the next demand to close the safety outputs (e.g. on starting).

6.1. Guard lock monitoring for process protection

The device is configured with the aid of the function actuator. Depending on the function actuator taught-in, guard lock monitoring for process protection is permanently active or available as an additional option. For further information about the possible settings, see 13.1. *Configuring device and teaching-in actuator for the first time*, page 38.

→ L + ... The following applies to active guard lock monitoring for process protection:

All versions feature two safe outputs for guard lock monitoring for process protection. The safety outputs FO1A and FO1B are switched off and the guard locking signal OL is cleared when the guard is released.

→ I + ... The following applies to optional guard lock monitoring for process protection:

All versions feature two safe outputs for monitoring the door position as well as the status signal OL for guard lock monitoring for process protection; this signal can be evaluated optionally. The safety outputs FO1A and FO1B are switched off and the door position 1 signal OD is cleared when the guard is opened.

6.2. Monitoring outputs/status bits

Depending on version, the signals listed in the following are available as a status bit or at the monitoring output. The status bits are evaluated via the BR/IO-Link Gateway. Please refer to the corresponding data sheet for further information.

6.2.1. Guard locking signal OL

The guard locking signal is present if guard locking is active.

6.2.2. Door position 1 signal OD

The door position 1 signal is sent as soon as the actuator is inserted into the switch head (state: guard closed and not locked).

The signal is also present if guard locking is active.

6.2.3. Door position 2 signal OT

The door position 2 signal is present when the actuator is completely inserted into the switch head and guard locking can be activated. In normal environmental conditions, the signal OT is sent after the signal OD as an additional door monitoring contact. The signal is also present if guard locking is active, see 6.4. *Switching states*, page 12.

6.2.4. Diagnostic signal OI

The diagnostic signal is present if there is an error (switch-on condition as for DIA LED).

6.2.5. Escape release signal OER

The escape release signal is present when the device was released manually or when activation of guard locking is prevented by manual release, see 7. *Manual release*, page 13.

The signal is reset when the state of guard locking control matches the guard locking state.

6.2.6. Status signal OM

The status signal is present if the device's safety outputs are switched.

6.2.7. Locking element signal OLS

The locking element signal is present if the locking element is stuck and guard locking cannot be released. The signal is reset as soon as the actuator is no longer under tensile stress or the locking element is no longer blocked.

6.2.8. Communication connection C

A monitoring output with the suffix C has the additional function of providing a communication connection to a BR/IO-Link Gateway. The switch delivers cyclical and acyclical data. You will find an overview of the communication data in 12. *Using communication data*, page 35.

If no BR/IO-Link Gateway is connected, this output behaves like a monitoring output.

6.3. Guard locking for process protection

(guard locking actuated by power-ON and released by spring force)

Important!	
	Malfunctions due to incorrect use. ▸ The actuator must not be under tensile stress during release. ▸ Guard locking is activated only if, in addition to the voltage at the guard locking solenoid, the electronics operating voltage is applied to the device.

The magnetically actuated guard locking operates in accordance with the open-circuit current principle. If the voltage is interrupted at the solenoid, guard locking is released and the guard can be opened directly.

The guard can be opened as long as no voltage is applied to the guard locking solenoid or there is no electronics operating voltage at the device.






If voltage is applied to the guard locking solenoid and the actuator is completely inserted, the guard locking pin is held in the extended position and the guard is locked.

Activating guard locking: close guard; apply voltage to the solenoid and apply the electronics operating voltage.

Releasing guard locking: disconnect voltage from the solenoid or disconnect the electronics operating voltage.

6.4. Switching states

The detailed switching states are listed in 15. *Status and error messages*, page 42. All safety outputs, signals and display LEDs are described there.

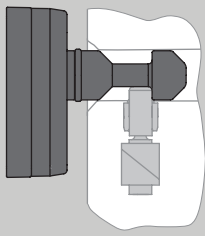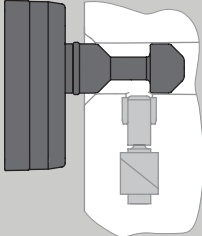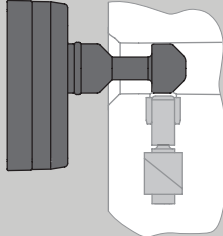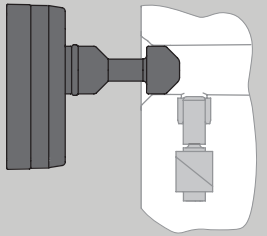	Guard closed and locked	Guard closed and not locked, ready for locking		Guard closed and not locked	Guard open
					
Voltage at the guard locking solenoid	on	off		off	irrelevant
Safety outputs F01A and F01B	on	off	on	off	on
					
Guard locking signal OL	on	off		off	off
Door position 1 signal OD	on	on		on	off
Door position 2 signal OT	on	on		off	off

7. Manual release


Some situations require the guard locking to be released manually (e.g. malfunctions or an emergency). A function check must be performed after release.

More information on this topic can be found in the standard EN ISO 14119:2025, section 7.2.3. The device can feature the following release functions:

- › 7.1. Auxiliary release, page 13
- › 7.2. Escape release, page 14

7.1. Auxiliary release

In the event of malfunctions, the guard locking can be released with the auxiliary release irrespective of the state of the solenoid.

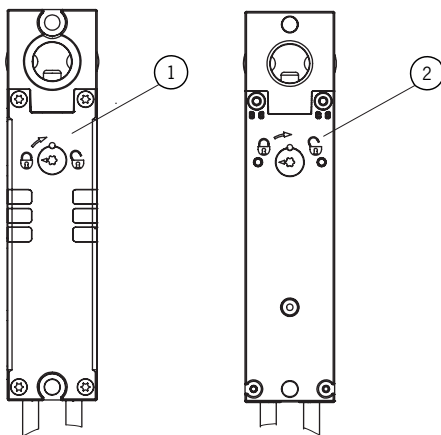

1	Auxiliary release on front side
2	Auxiliary release on rear side

Important!



- › The actuator must not be under tensile stress during manual release.
- › To prevent tampering, the auxiliary release must be sealed with sealing lacquer, for example, before the switch is set up.
- › Loss of the release function due to mounting errors or damage during mounting.
- › Check the release function every time after mounting.
- › The auxiliary release is not a safety function.
- › The correct function must be checked at regular intervals.
- › Observe the notes on any available data sheets.

Actuating auxiliary release

1. Remove seal or make a hole.
2. Using a TX15 screwdriver, turn the auxiliary release to  in the direction of the arrow.
 - ➔ If guard locking was activated, it is released.

➔ L + ... **The following applies to active guard lock monitoring for process protection:**

- ➔ The guard locking signal OL and the safety outputs are switched off.


➔ I + ... **The following applies to optional guard lock monitoring for process protection:**

- ➔ The guard locking signal OL is switched off.
 - ➔ The STATE LED flashes alternately white/orange slowly.
 - ➔ The LOCK LED flashes orange slowly.
3. Using a screwdriver, turn the auxiliary release to  in the opposite direction to the arrow to reset.
 4. Seal with sealing lacquer.
 5. Check correct function of the device, see 13.3. *Functional check*, page 40.

7.2. Escape release

The escape release can be retrofitted.

The escape release permits opening of a locked guard from the danger area without tools, see 16.1.3. *Dimension drawing for safety switch CTS...*, page 52.

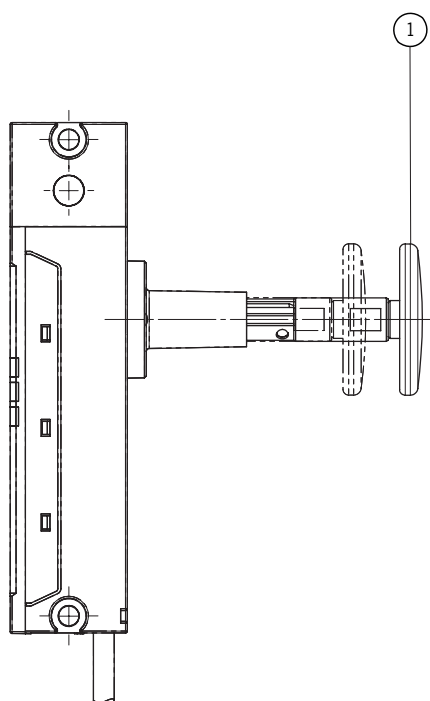

1	Escape release
---	----------------

Important!



- It must be possible to actuate the escape release manually from inside the protected area without tools.
- It must not be possible to reach the escape release from the outside.
- The actuator must not be under tensile stress during manual release.
- The correct function must be checked at regular intervals.
- The escape release is supplied in the actuated state. Before mounting, the escape release must be unlocked. Observe the notes in the assembly instructions for the escape release.
- If extension pieces are used, the guide sleeve supplied must be used.
- Loss of the release function due to mounting errors or damage during mounting.
- Check the release function every time after mounting.
- The escape release meets the requirements of Category B according to EN ISO 13849-1.

Actuating escape release

1. Press the red release knob to the end stop.
 - ➔ If guard locking was activated, it is released.



The following applies to active guard lock monitoring for process protection:

- ➔ The guard locking signal OL and the safety outputs are switched off.



The following applies to optional guard lock monitoring for process protection:

- ➔ The guard locking signal OL is switched off.
 - ➔ The STATE LED flashes alternately white/orange slowly.
 - ➔ The LOCK LED flashes orange slowly.
2. Pull out the escape release knob to reset the escape release.
 3. Check correct function of the device, see 13.3. *Functional check*, page 40.

8. Mounting

8.1. General assembly instructions

CAUTION	
	Safety switches must not be bypassed (bridging of contacts), turned away, removed or otherwise rendered ineffective. Observe EN ISO 14119:2025, section 8, for information about reducing the possibilities for bypassing an interlocking device.
NOTICE	
	Risk of damage to equipment and malfunctions as a result of incorrect installation. - Safety switches and actuators must not be used as an end stop. - Observe EN ISO 14119:2025, sections 6.2 and 6.3, for information about mounting the safety switch and the actuator. - Protect the switch against damage, as well as against penetrating foreign objects such as swarf, sand and blasting shot, etc.

8.2. Mounting CTS-BP/BR

NOTICE	
	Risk of damage to equipment and malfunctions as a result of incorrect installation. - Actuator and safety switch must be mounted such that the actuator is perpendicularly and completely inserted into the switch when the guard is closed, see <i>Fig.3 Actuator alignment, page 18</i>. The guard locking function is not ensured if mounting is incorrect. - Observe the following guidelines during mounting: - Mounting with screws of property class 8.8 or higher. - The minimum screw diameter is 5 mm. - Secure the fixing material against loosening, e.g. by means of medium-strength positive screw locking. - The auxiliary release must be sealed before setup, e.g. with sealing lacquer. - Observe the following points if the escape release is used: - The escape release is supplied in the actuated state. Before mounting, the escape release must be unlocked. Observe the notes in the assembly instructions for the escape release. - Before mounting the escape release on a profile or if extension pieces are used, the push-button must be removed. It must then be re-fitted and tightened with a tightening torque of 0.6 Nm. - If extension pieces are used, the guide sleeve supplied must be used.



The following applies to optional guard lock monitoring for process protection:

Important!

	- From the assured release distance S_{ar}, the safety outputs are safely shut down. To achieve the assured release distance S_{ar} the actuator must be pulled completely out of the switch head. - To achieve the assured operating distances S_{ao}, the actuator must be inserted completely into the switch head.
---	--

Observe the following points during mounting:

- › Observe the min. door radii, see 16.1.3. *Dimension drawing for safety switch CTS...*, page 52.
- › Observe the permissible angle between switch and actuator, see *Fig.5 Maximum actuator deflection and maximum center offset*, page 19.
- › Observe the tightening torque for mounting the switch and the actuator, see *Fig.4 Installation example*, page 18:
 - Actuator: 6 Nm
 - Switch head: 6 Nm
 - Switch housing: 3 Nm
- › When mounting several safety switches, observe the stipulated minimum distance to avoid mutual interference, see *Fig.1 Minimum distances for mounting several safety switches*, page 17.


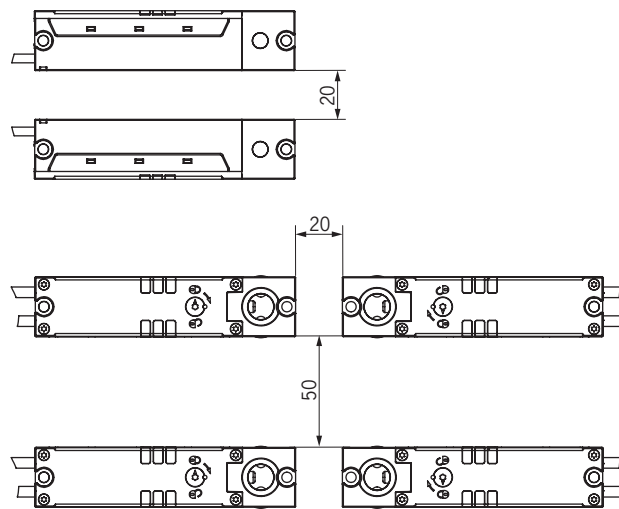


Fig.1: Minimum distances for mounting several safety switches

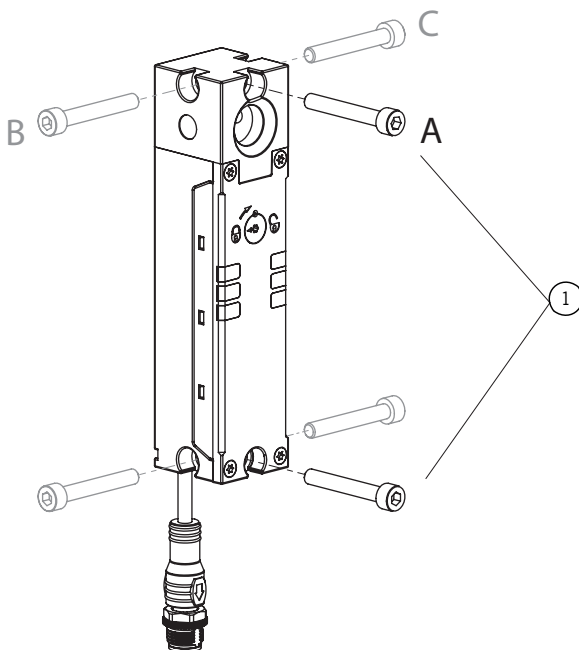

1	e.g. screw M5 - ISO 4762
---	--------------------------

Fig.2: Front (A) and side (B, C) mounting

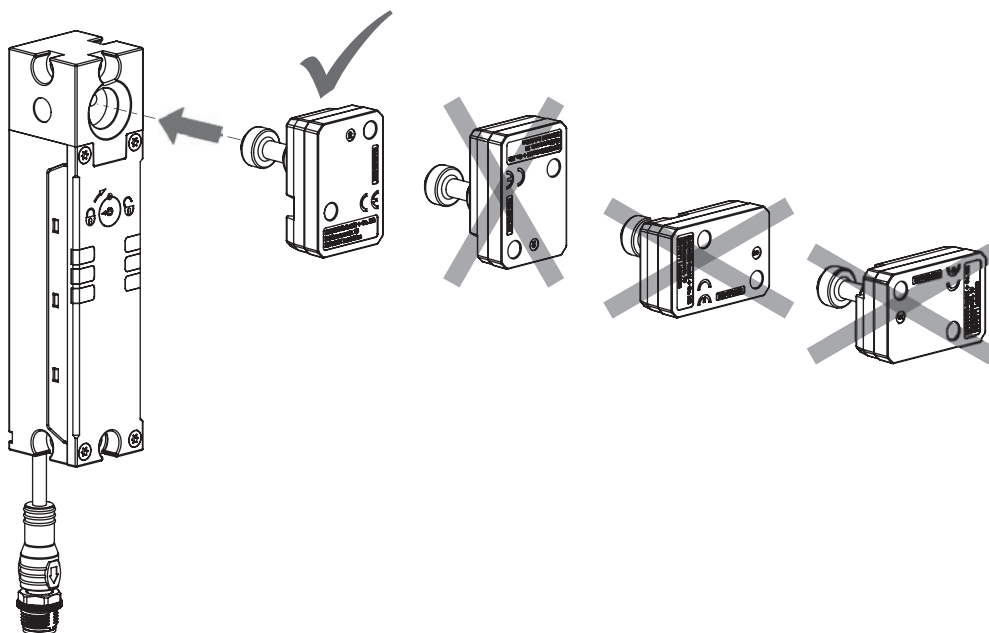


Fig.3: Actuator alignment

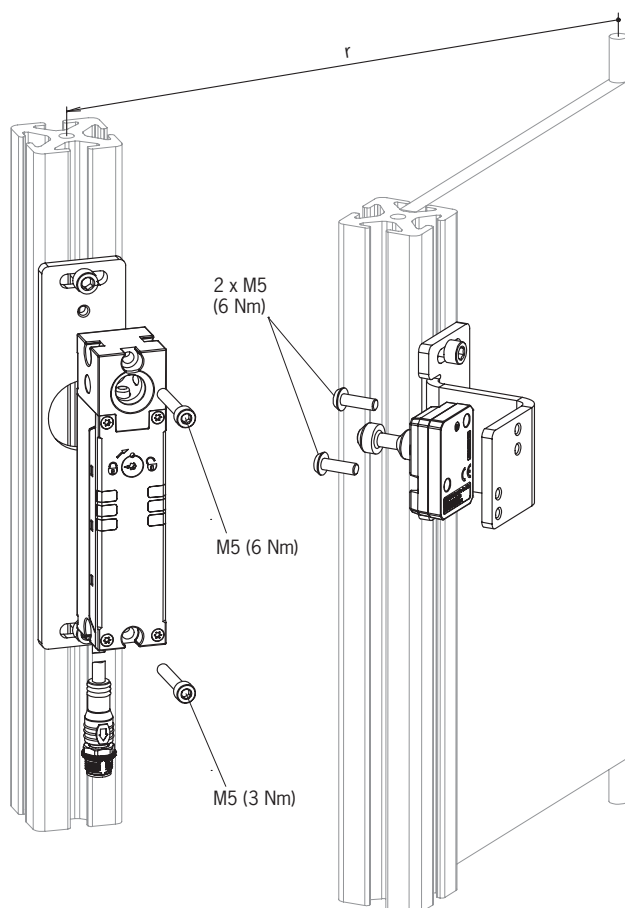


Fig.4: Installation example

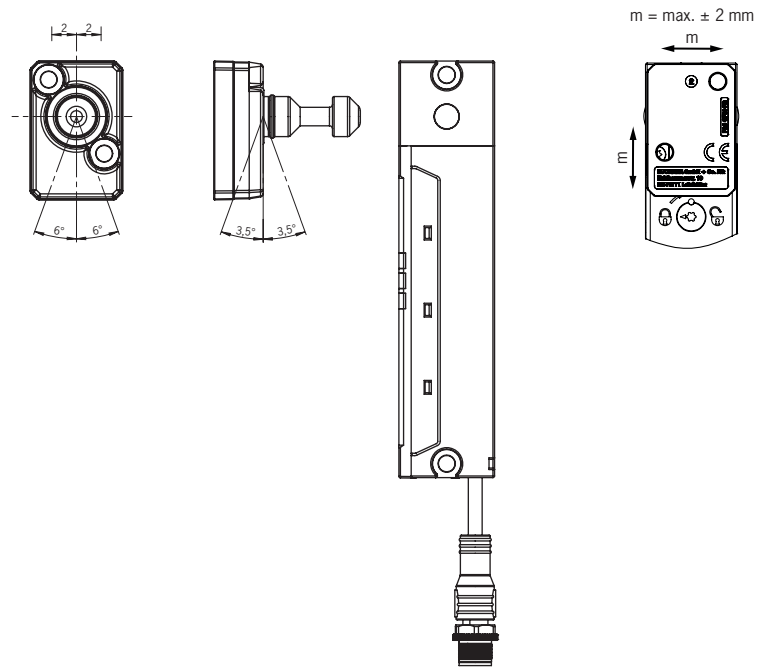


Fig.5: Maximum actuator deflection and maximum center offset

9. Electrical connection

The following connection options are available:

- Separate operation
- Series connection with wiring in the control cabinet
- Series connection with Y-distributors
- Connection without IO-Link communication
- Connection with IO-Link communication

WARNING	
	In the event of a fault, loss of the safety function due to incorrect connection. ▸ To ensure safety, both safety outputs must always be evaluated. ▸ Monitoring outputs must not be used as a safety output. ▸ Lay the connecting cables with protection to prevent short circuits.

CAUTION	
	Risk of damage to equipment or malfunctions as a result of incorrect connection. ▸ Do not use a control system with pulsing or switch off the pulsing function in your control system. The device generates its own test pulses on the safety outputs. A downstream control system must tolerate these test pulses, which may have a length of up to 300 µs. Depending on the inertia of the downstream device (control system, relay, etc.), this can lead to short switching operations. The test pulses are output with the safety outputs switched off only during device start. ▸ The inputs on a connected evaluation unit must be positive switching, as the two outputs on the safety switch deliver a level of +24 V in the switched-on state. ▸ All electrical connections must either be isolated from the mains supply by a safety transformer according to IEC 61558-2-6 with limited output voltage in the event of a fault, or by other equivalent insulation measures (SELV). ▸ All electrical outputs must have an adequate protective circuit for inductive loads. The outputs must be protected with a free-wheeling diode for this purpose. Varistors and RC interference suppression units must not be used. ▸ Power devices which are a powerful source of interference must be installed in a separate location away from the input and output circuits for signal processing. The cable routing for safety circuits should be as far away as possible from the cables of the power circuits. ▸ To avoid EMC interference, the physical environmental and operating conditions at the installation site of the device must comply with the requirements according to the standard EN 60204-1 (EMC). ▸ Pay attention to any interference fields from devices such as frequency converters or induction heating systems. Observe the EMC instructions in the manuals from the respective manufacturer. ▸ If the solenoid is controlled with a frequency of more than 0.2 Hz, the device may react with a delay. ▸ In devices with IMP/IMM inputs, the power supply for the evaluation electronics is separate from the power supply for the guard locking solenoid. If different power supplies are used, they must have the same reference potential. ▸ For device variants with two connecting cables, both cables must be laid in the same cable duct.

Important!	
	If the device does not appear to function when the operating voltage is applied (e.g. the green STATE LED does not flash), the safety switch must be returned to EUCHNER.

9.1. Notes about UL

Important!	
	▸ This device is intended to be used with a Class 2 power source in accordance with UL1310. As an alternative an LV/C (Limited Voltage/Current) power source with the following properties can be used: This device shall be used with a suitable isolating source in conjunction with a fuse in accordance with UL248. The fuse shall be rated max. 3.3 A and be installed in the max. 30 V DC power supply to the device in order to limit the available current to comply with the UL requirements. Please note possibly lower connection ratings for your device (refer to the technical data). ▸ For use and application as per the requirements of UL¹⁾ a connecting cable listed under the UL category code CYJV/7, min. 24 AWG, min. 80 °C, must be used.
¹⁾ Note on the scope of the UL approval: only for applications as per NFPA 79 (Industrial Machinery)	

9.2. Safety in case of faults

- The operating voltage at UB and the solenoid operating voltage at IMP are reverse polarity protected.
- The safety outputs FO1A and FO1B are short circuit-proof.
- A short circuit between the safety outputs is detected on starting or when the safety outputs are activated by the device.
- A short circuit in the cable can be excluded by laying the cable with protection.

9.3. Fuse protection for power supply

The power supply must be provided with fuse protection depending on the number of switches and the current required for the outputs. The following rules apply:

Max. current consumption of an individual switch $I_{\max}$

$$I_{\max \text{ UB}} = I_{\text{UB}_1} + I_{\text{FO1A+FO1B}} + I_{\text{OX1}} + I_{\text{OX2}}$$

I_{UB_1} = Switch operating current (max. 50 mA)

I_{OX} = Load current of monitoring outputs (max. 20 mA per monitoring output)

$I_{\text{FO1A+FO1B}}$ = Load current of safety outputs FO1A + FO1B (2 x max. 75 mA)

I_{IMP} = Switching current of solenoid control input (max. 500 mA)

Max. current consumption of a switch chain $\Sigma I_{\max}$

$$\Sigma I_{\max \text{ UB}} = I_{\text{FO1A+FO1B}} + n \times (I_{\text{UB}_2} + I_{\text{OX1}} + I_{\text{OX2}})$$

n = Number of connected switches

I_{UB_2} = Switch operating current (max. 80 mA)

Important	
	If there are further monitoring outputs, their load current must also be taken into account.

9.4. Requirements for connecting cables


CAUTION	
	Risk of damage to equipment or malfunctions as a result of incorrect connecting cables. - Use connection components and connecting cables from EUCHNER. - If other connection components are used, the requirements in the following table apply. EUCHNER provides no warranty for safe function in case of failure to comply with these requirements.

Observe the following requirements with respect to the connecting cables:

Parameter	Value		Unit
	2 x M12/8-pin or 5-pin	M12/8-pin	
Recommended cable type	LIYY 8 x 0.25 or 5 x 0.34	LIYY 8 x 0.34	mm ²
Cable	8 x 0.25 or 5 x 0.34	8 x 0.34	mm ²
Cable resistance R max.	80	80	Ω/km
Inductance L max.	0.65	0.65	mH/km
Capacitance C max.	120	120	nF/km

9.5. Connector assignments


9.5.1. Connector assignment of CTS-C2-...-AB-... with plug connectors 2 x M12

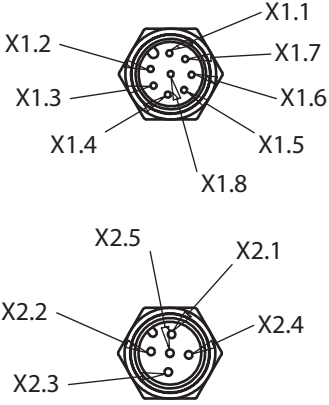Plug connector (view of connection side)	Pin	Designation	Function	Conductor color- ing of connecting cable ¹⁾
2 x M12 	X1.1	FI1B	Enable input, channel B	WH
	X1.2	UB	Electronics operating voltage, 24 V DC	BN
	X1.3	FO1A	Safety output, channel A Active guard lock monitoring for process protection: ON if door is closed and locked. Optional guard lock monitoring for process protection: ON if door is closed.	GN
	X1.4	FO1B	Safety output, channel B Active guard lock monitoring for process protection: ON if door is closed and locked. Optional guard lock monitoring for process protection: ON if door is closed.	YE
	X1.5	OX1/C ²⁾	Monitoring output 1/communication	GY
	X1.6	FI1A	Enable input, channel A	PK
	X1.7	OVUB	Electronics operating voltage, 0 V DC	BU
	X1.8	-	n.c.	RD
	X2.1	IMM	Solenoid operating voltage, 0 V DC	BN
	X2.2	OX2 ²⁾	Monitoring output 2	WH
	X2.3	-	n.c.	BU
	X2.4	IMP	Solenoid operating voltage, 24 V DC	BK
	X2.5	-	n.c.	GY

¹⁾ Only for standard EUCHNER connecting cable

²⁾ The function of the monitoring output OX is determined by the actuator taught-in. You will find more detailed information on data sheet 2153710 or at www.euchner.com.


9.5.2. Connector assignment of CTS-C2-...-BP-...-SA-... with plug connector M12, 8-pin

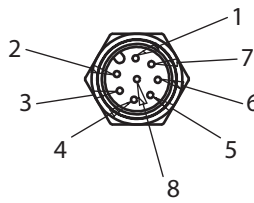Plug connector (view of connection side)	Pin	Designation	Function	Conductor coloring of connecting cable ¹⁾
1 x M12 	1	IMP	Solenoid operating voltage, 24 V DC	WH
	2	UB	Electronics operating voltage, 24 V DC	BN
	3	FO1A	Safety output, channel A Active guard lock monitoring for process protection: ON if door is closed and locked. Optional guard lock monitoring for process protection: ON if door is closed.	GN
	4	FO1B	Safety output, channel B Active guard lock monitoring for process protection: ON if door is closed and locked. Optional guard lock monitoring for process protection: ON if door is closed.	YE
	5	OX1/C ²⁾	Monitoring output 1/communication	GY
	6	OX2 ²⁾	Monitoring output 2	PK
	7	OVUB	Electronics operating voltage, 0 V DC	BU
	8	IMM	Solenoid operating voltage, 0 V DC	RD

¹⁾ Only for standard EUCHNER connecting cable

²⁾ The function of the monitoring output OX is determined by the actuator taught-in. You will find more detailed information on data sheet 2153710 or at www.euchner.com.



9.5.3. Connector assignment of CTS-C2-...-BR-...-SA-... with plug connector M12, 8-pin

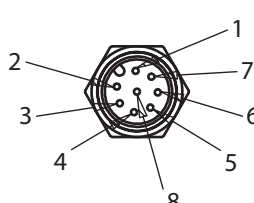Plug connector (view of connection side)	Pin	Designation	Function	Conductor coloring of connecting cable ¹⁾
1 x M12 	1	FI1B	Enable channel B	WH
	2	UB	Electronics operating voltage, 24 V DC	BN
	3	FO1A	Safety output, channel A Active guard lock monitoring for process protection: ON if door is closed and locked. Optional guard lock monitoring for process protection: ON if door is closed.	GN
	4	FO1B	Safety output, channel B Active guard lock monitoring for process protection: ON if door is closed and locked. Optional guard lock monitoring for process protection: ON if door is closed.	YE
	5	OX/C ²⁾	Monitoring output / communication	GY
	6	FI1A	Enable channel A	PK
	7	OVUB	Electronics operating voltage, 0 V DC	BU
	8	IMP	Solenoid operating voltage, 0 V DC	RD

¹⁾ Only for standard EUCHNER connecting cable

²⁾ The function of the monitoring output OX is determined by the actuator taught-in. You will find more detailed information on data sheet 2153710 or at www.euchner.com.

9.5.4. Connector assignment of CTS-C2-...-VBB-... with plug connectors 2 x M12, 5-pin

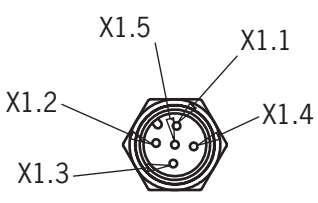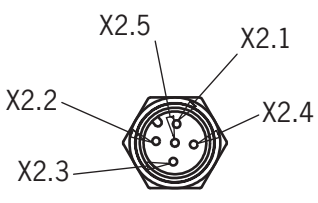Plug connector (view of connection side)	Pin	Designation	Function	Conductor color- ing of connecting cable ¹⁾
2 x M12 	X1.1	UB	Electronics operating voltage, 24 V DC	BN
	X1.2	F01A	Safety output, channel A	WH
	X1.3	0 V UB	Electronics operating voltage, 0 V DC	BU
	X1.4	F01B	Safety output, channel B	BK
	X1.5	-	n.c.	GY
	X2.1	-	n.c.	BN
	X2.2	-	n.c.	WH
	X2.3	IMM	Solenoid operating voltage, 0 V DC	BU
	X2.4	IMP	Solenoid operating voltage, 24 V DC	BK
	X2.5	-	n.c.	GY
				

¹⁾ Only for standard EUCHNER connecting cable

9.6. Notes on operation with safe control systems

Observe the following guidelines for connection to safe control systems:

- › Use a common power supply for the control system and the connected safety switches.
- › A pulsed power supply must not be used for UB. Tap the supply voltage directly from the power supply unit. If the power supply is connected to a terminal of a safe control system, this output must provide sufficient electrical current.
- › The safety outputs FO1A and FO1B can be connected to the safe inputs of a control system. Prerequisite: the input must be suitable for pulsed safety signals (OSSD signals, e.g. from light grids). The control system must tolerate test pulses on the input signals. This normally can be set up by parameter assignment in the control system. Observe the notes of the control system manufacturer. For the test pulse duration of your device, refer to chapter 16. *Technical data*, page 48.
- › With series connection: Always connect inputs FI1A and FI1B directly to a power supply unit or to outputs FO1A and FO1B of another EUCHNER BR device. Pulsed signals must not be present at inputs FI1A and FI1B.

A detailed example of connecting and setting the parameters of the control system is available for many devices at www.euchner.com, in the area *Downloads/Applications/CTS*. The features of the respective device are dealt with there in greater detail.

9.7. Connection without and with IO-Link communication

Connection without IO-Link communication

Only the safety and monitoring outputs are switched with this connection method.

With a series connection, the safety signals are looped through from device to device.

Connection with IO-Link communication

If, in addition to the safety function, detailed monitoring and diagnostic data are to be processed, a BR/IO-Link Gateway is required. To poll the communication data from the connected device, communication connection C is routed to the BR/IO-Link Gateway.

You will find further information in the operating instructions for your BR/IO-Link Gateway.

10. Connection of a single CTS-C2-BP/BR-FLX (separate operation)

WARNING



In the event of a fault, loss of the safety function due to incorrect connection.
 › To ensure safety, both safety outputs FO1A and FO1B must always be evaluated.

Important!



The example shows only an excerpt that is relevant for connection of the system. The example illustrated here does not show complete system planning. The user is responsible for safe integration into the overall system. Detailed application examples can be found at www.euchner.com. Enter the order number of your switch in the search box. You will find all available connection examples for the device in *Downloads*.

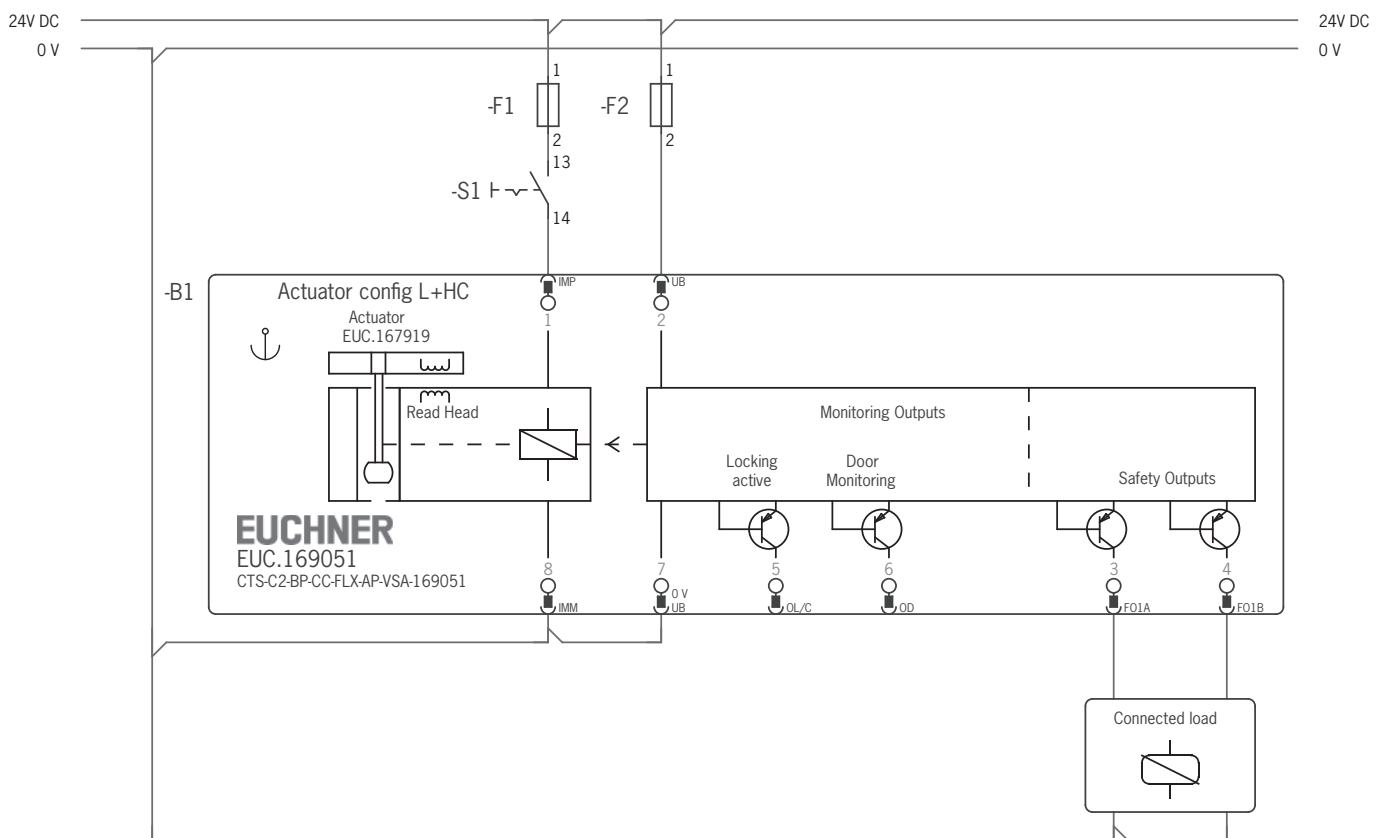


Fig.6: Connection example for separate operation (principle of operation)

11. Connection of several devices in a chain (series connection)

WARNING	
	In the event of a fault, loss of the safety function due to incorrect connection. ▸ To ensure safety, both safety outputs FO1A and FO1B must always be evaluated.
Important!	
	▸ A BR chain may contain a maximum of 20 devices. ▸ The BR chain is not permitted to be changed during operation. ▸ The example shows only an excerpt that is relevant for the connection of the CTS system. The example illustrated here does not show complete system planning. The user is responsible for safe integration into the overall system. Detailed application examples can be found at www.euchner.com. Enter the order number of your switch in the search box. You will find all available connection examples for the device in <i>Downloads</i>. ▸ Make sure you use the correct Y-distributors, see 11.2.3. <i>Connector assignment of Y-distributor for series connection without IO-Link communication, page 32</i> and 11.2.4. <i>Connector assignment of Y-distributor for series connection with IO-Link communication, page 34</i>.

11.1. Series connection with wiring in the control cabinet

The series connection can be implemented via additional terminals in a control cabinet.

Important!	
	In case of series connection with IO-Link communication: ▸ The safety outputs are permanently assigned to the respective safety inputs of the downstream switch. FO1A must be routed to FI1A and FO1B to FI1B. ▸ If the connections are interchanged (e.g. FO1A to FI1B), the downstream device will enter the fault state.


11.2. Series connection with Y-distributors

The series connection is shown here based on the example of the version with plug connector M12. The switches are connected one behind the other with the aid of pre-assembled connecting cables and Y-distributors.

If a safety door is opened or if a fault occurs on one of the switches, the system shuts down the machine.

11.2.1. Maximum cable lengths for BR switch chains with CTS-C2...-AB-... with plug connectors 2 x M12

Important!	
	The maximum number of switches in a BR switch chain depends on many factors, including the cable length. This case example shows a standard application. You will find further connection examples at www.euchner.com .

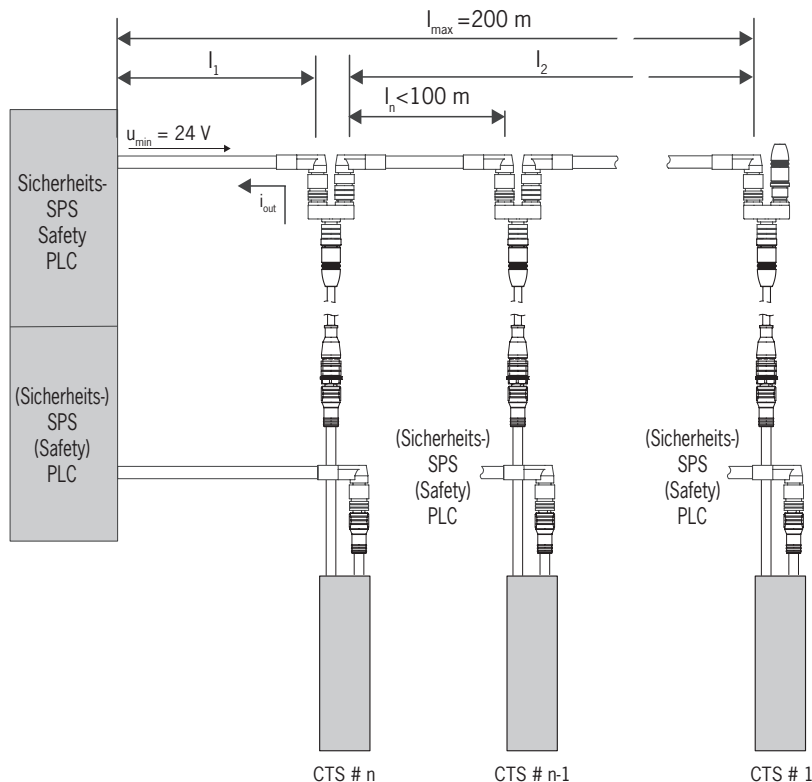


Determining cable lengths using the example table

n Max. number of switches depending on the cable length	$I_{F01A/F01B}$ (mA) Possible output current per channel F01A/F01B	l_1 (m) Max. cable length from the last switch to the control system
5	10	150
	25	100
	50	80
	75	50
6	10	120
	25	90
	50	70
	75	50
10	10	70
	25	60
	50	50
	75	40

11.2.2. Maximum cable lengths for BR switch chains with CTS-C2-BR....-SA with plug connector M12, 8-pin

Important!	
	The maximum number of switches in a BR switch chain depends on many factors, including the cable length. This case example shows a standard application. Contact EUCHNER: ▸ If you connect more than 5 switches of this version in series. ▸ If you plan to use a different cable design, e.g. cross-section, material, etc.

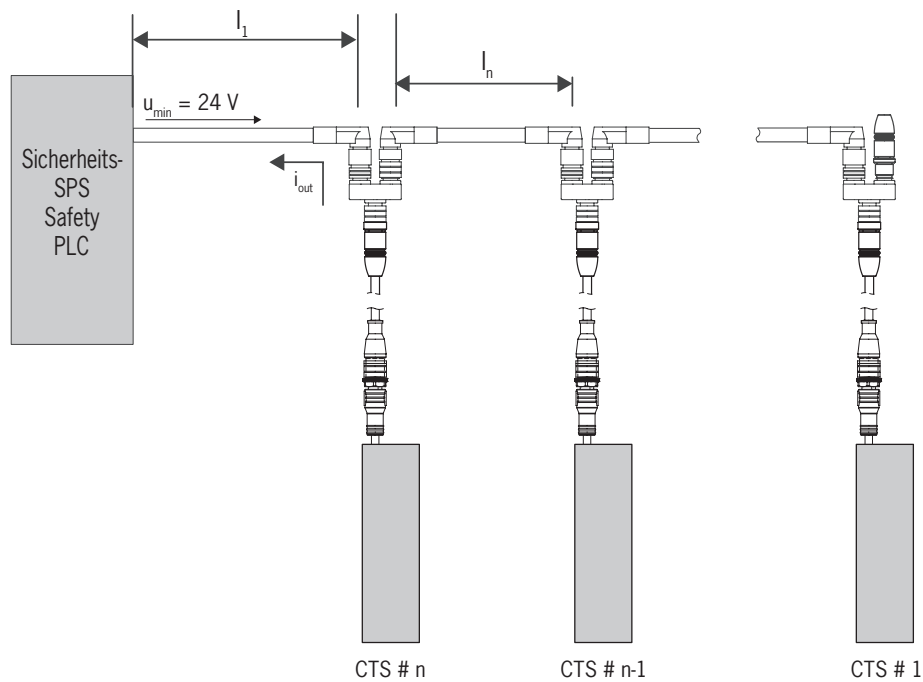

Determining cable lengths using the example table

n	I _{F01A/F01B} (mA)	l ₁ (m)	l _n (m)
Max. number of switches depending on the cable length	Possible output current per channel F01A/F01B	Max. cable length from the last switch to the control system	Max. cable length between the individual switches
1	10	50	-
	25		
	50	45	
	75		
2	10	20	12
	25		10
	50		
	75		
3	10	12	5
	25		
	50		
	75		
4	10	6	5
	25	5	
	50		
	75		

n Max. number of switches depending on the cable length	$I_{F01A/F01B}$ (mA) Possible output current per channel F01A/F01B	l_1 (m) Max. cable length from the last switch to the control system	l_n (m) Max. cable length between the individual switches
5	10	5	2
	25		
	50		
	75		




11.2.3. Connector assignment of Y-distributor for series connection without IO-Link communication

(only for BR version with plug connectors 2 x M12)




Important!



- The switch chain must always be terminated with strapping plug 097645.
- A higher-level control system cannot detect which safety door is open or on which switch a fault has occurred with this connection technology.

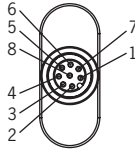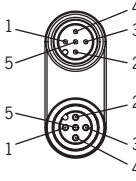X1		Plug connector X1	Y-distributor	Plug connector X2/X3	X2	
Pin	Function	X1 Socket 	097627 	X2 Plug 	Pin	Function
X1.1	FI1B				X2.1	UB
X1.2	UB				X2.2	F01A
X1.3	F01A				X2.3	0 V
X1.4	F01B				X2.4	F01B
X1.5	n.c.				X2.5	*
X1.6	FI1A					
X1.7	OVUB					
X1.8	*					

X3	
Pin	Function
X3.1	UB
X3.2	FI1A
X3.3	0 V
X3.4	FI1B
X3.5	*

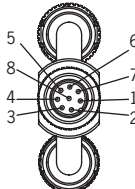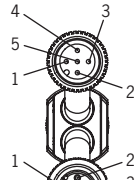X1		Plug connector X1	Y-distributor	Plug connector X2/X3	X2	
Pin	Function	X1 Socket 	111696 112395 With connecting cable 	X2 Plug 	Pin	Function
X1.1	FI1B				X2.1	UB
X1.2	UB				X2.2	FI1A
X1.3	F01A				X2.3	0 V
X1.4	F01B				X2.4	FI1B
X1.5	n.c.				X2.5	*
X1.6	FI1A					
X1.7	OVUB					
X1.8	*					

X3	
Pin	Function
X3.1	UB
X3.2	FI1A
X3.3	0 V
X3.4	FI1B
X3.5	*

* Function and compatibility are dependent on the connector assignment of the connected device.

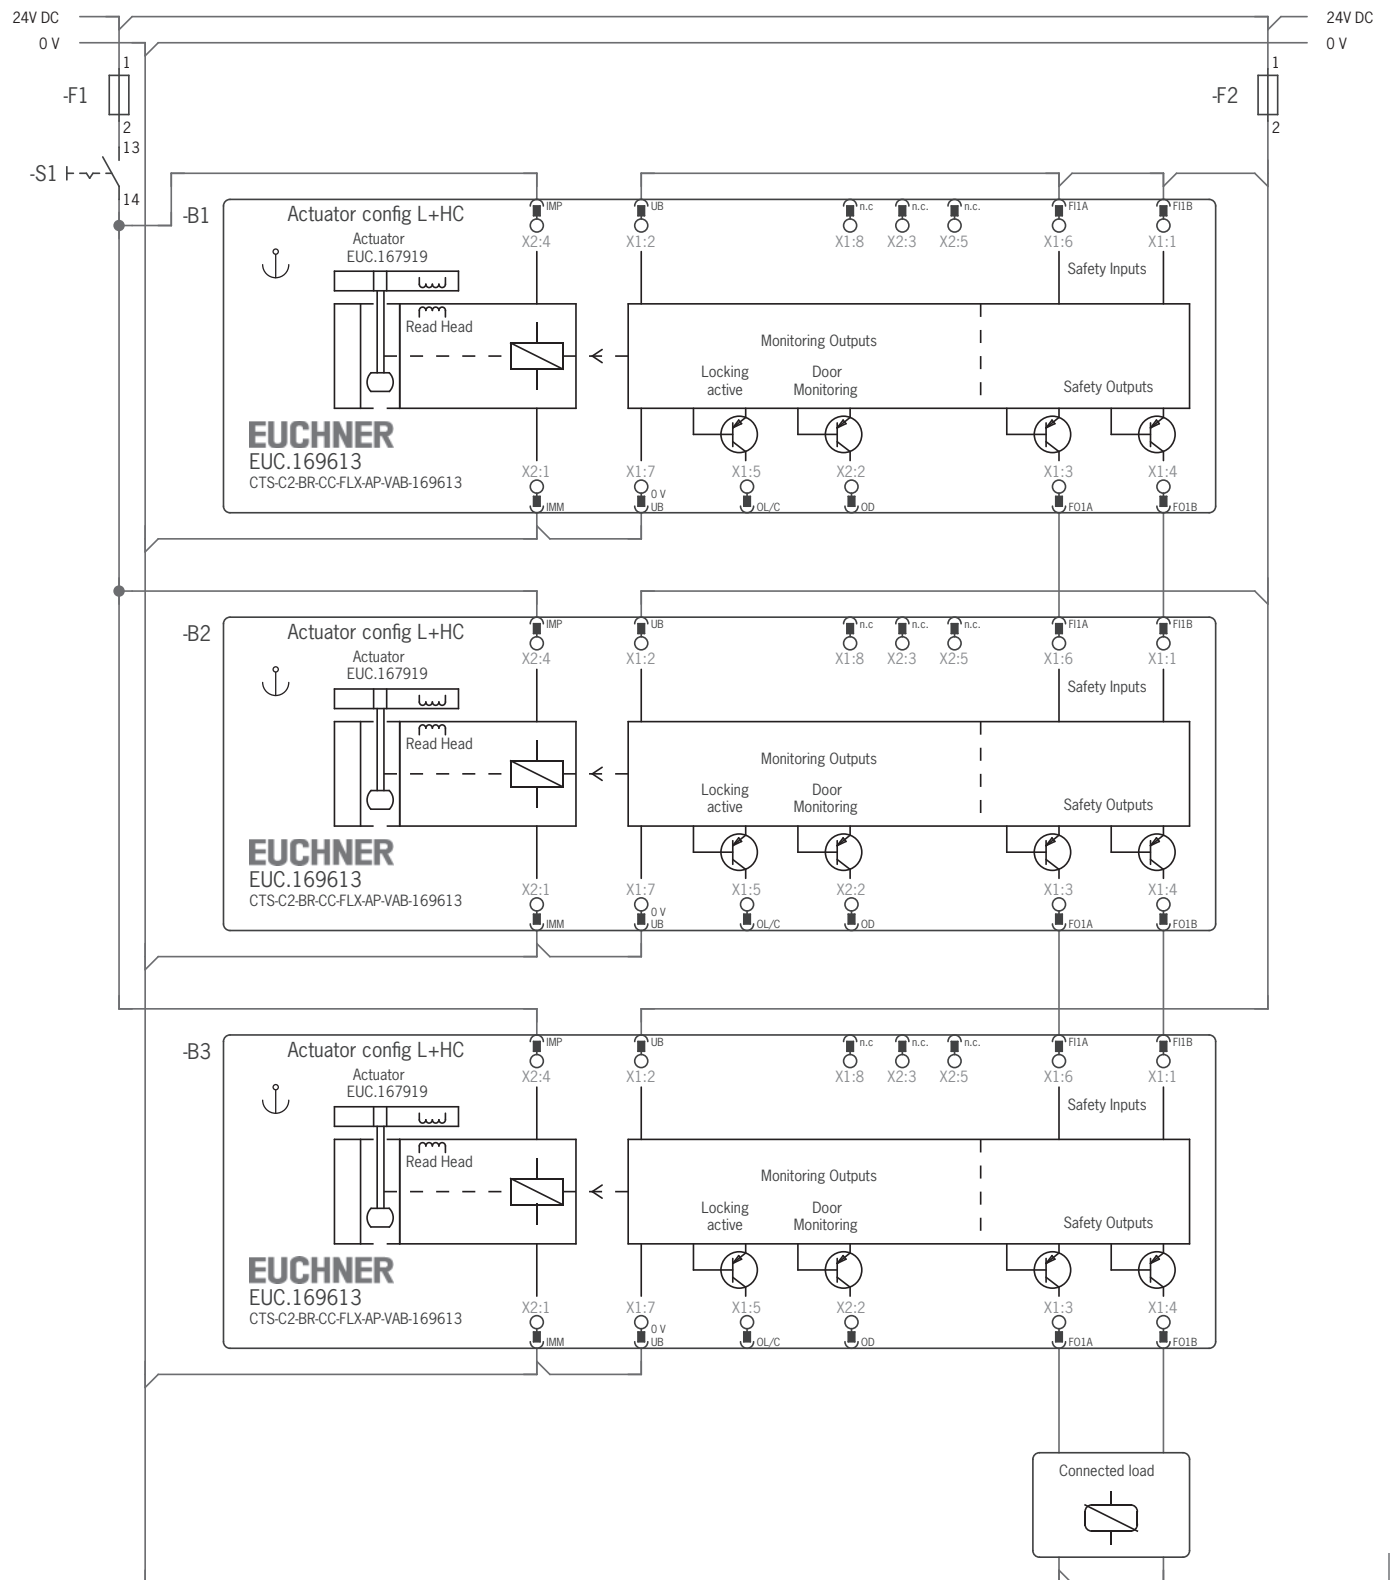


Fig.7: Connection example for series connection (principle of operation)

11.2.4. Connector assignment of Y-distributor for series connection with IO-Link communication

(only for BR version with plug connectors 2 x M12)

Important!




▸


The switch chain must always be terminated with strapping plug 097645.

X1	
Pin	Function
X1.1	FI1B
X1.2	UB
X1.3	FO1A
X1.4	FO1B
X1.5	C
X1.6	FI1A
X1.7	OVUB
X1.8	n.c.


X1 Socket

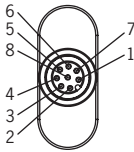

157913



X2 Plug

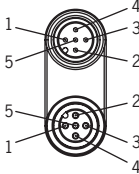


X3 Socket




X2	
Pin	Function
X2.1	UB
X2.2	FO1A
X2.3	0 V
X2.4	FO1B
X2.5	C


X1 Socket

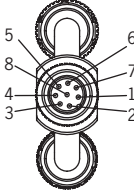

158192
158193



X2 Plug

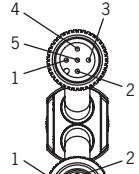

X3 Socket



X3	
Pin	Function
X3.1	UB
X3.2	FI1A
X3.3	0 V
X3.4	FI1B
X3.5	C

12. Using communication data

The device transmits both process data, which are continuously transmitted to the evaluation unit (cyclical data), and data that can be polled specifically as needed (acyclical data).

A BR/IO-Link Gateway is required to use the device's communication data and forward them to a higher-level bus system. The following devices are suitable:

- GWY-CB-1-BR-IO (BR/IO-Link Gateway)
- ESM-CB (safety relay with integrated BR/IO-Link Gateway)

Connection to a BR/IO-Link Gateway GWY-CB

The Gateway is an IO-Link device. Communication via IO-Link offers cyclical (process data) and acyclical (device data and events) data exchange.

The communication connection C on the device allows the diagnostic line to be connected to the Gateway. The Ox/C connection represents a non-safety-related communication channel between the Gateway and the connected devices.

IO-Link communication can be used for the following functions as well:

- Reset for acknowledging error messages

You will find further information in the operating instructions for your BR/IO-Link Gateway.

Connection to a safety relay ESM-CB

The safety relay ESM-CB features an integrated BR/IO-Link Gateway. In addition to functioning as an IO-Link device, the device can be used for connecting two monitored single- or dual-channel sensor circuits. The sensor circuits evaluate various signaling devices:

- Sensor circuit S1 with short circuit detection; suitable for single- or dual-channel safety sensors
- Sensor circuit S2, suitable for OSSD signals; short circuit detection by signaling device

When at least one sensor circuit is interrupted, the safety relay initiates the safe state. Different relay starting behaviors and various monitoring functions are possible.

The device's safety outputs FO1A and FO1B are routed to the OSSD inputs of the safety relay. The Ox/C connection of the device allows the diagnostic line to be connected to the Gateway.

You will find further information in the operating instructions for your safety relay with integrated BR/IO-Link Gateway.

12.1. Cyclical data (process data)

Table 2: Cyclical data (process data)

	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Byte 1	OI	-	OER	-	OM	-	-	OD
Byte 2	-	-	-	-	OLS	-	OL	OT

Bit	Signal	Message
OI	Diagnostics	There is a fault, see 15.3. Error messages, page 45.
OM	Status	The safety outputs of the device are switched.
OD	Door position 1	A valid actuator is detected in the actuating range, and the guard is closed.
OER	Escape release	The device was released manually.
OT	Door position 2	The actuator is inserted into the switch head, and guard locking can be activated.
OLS	Locking element	The locking element is stuck, see 15.3. Error messages, page 45.
OL	Guard locking	Guard locking is active.

12.2. Acyclical data (device data and events)

After one of the commands listed below is sent, the requested data are provided via the IO-Link Gateway. The reply message always consists of 8 bytes in big endian format.

Example 1: reply message in response to the command *Send device ID number/serial number*: 06 **02 8F ED 00 01 17 00**

In this example, the device's ID number is **167917** and its serial number is **279**.

Byte number	Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7
Reply in hex	06	02	8F	ED	00	01	17	00
Description	User data length in bytes	Device ID number			Serial number			Padding data
Reply in dec	6 bytes	167917			279			-

Example 2: reply message in response to the command *Send current device configuration*: 02 **01 07 00 00 00 00 00**

In this example, the device has the **high** coding level and guard lock monitoring is **active**.

Byte number	Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7
Reply in hex	02	01	07	00	00	00	00	00
Description	User data length in bytes	Coding level	Guard lock monitoring	Padding data				
Reply in dec	6 bytes	High coding level	Active	-	-	-	-	-

Command		Reply		
HEX	Meaning	Number of bytes	Bit sequence (big endian format)	
0x02	Send device ID number/serial number	6	Bytes 1 - 3	Device ID number
			Bytes 4 - 6	Serial number
0x03	Send version number of the device	5	Byte 1	(V)
			Bytes 2 - 4	Version number
0x05	Send number of devices in series connection	1		
0x08	Send number of starting processes	3		
0x11	Send number of switching cycles (solenoid)	3		
0x12	Send current error code	1		
0x13	Send most recently saved error code	1		
0x14	Send size of log file	1		
0x15	Send entry from log file with index	1		
0x16	Send current actuator code	5	Bytes 3 - 5	
0x17	Send taught-in actuator code	5	Bytes 3 - 5	
0x18	Send disabled actuator code	5	Bytes 3 - 5	
0x19	Send applied voltage in mV	2		
0x0B	Send current device configuration	2	Byte 1	0x00 – coding level not configured
				0x01 – high coding level
				0x02 – low coding level
			Byte 2	0x00 – guard lock monitoring not configured
				0x05 – guard lock monitoring optional
				0x08 – guard lock monitoring active

Command		Reply		
HEX	Meaning	Number of bytes	Bit sequence (big endian format)	
0x0F	Send number of teach-in operations, factory resets and resets for acknowledging error messages	3	Byte 1	Number of teach-in operations
			Byte 2	Number of factory resets
			Byte 3	Number of resets for acknowledging error messages
0x1A	Send current temperature in °C	1		
0x1B	Send number of switching cycles	3		
0x1D	Reset for acknowledging error messages ¹⁾	-		
0x1E	Factory reset	1	0x1E – factory reset performed	

¹⁾ Each BR device must be addressed individually in a chain.

For more information on these and other acyclical data, refer to the operating instructions for your BR/IO-Link Gateway.

13. Setup

13.1. Configuring device and teaching-in actuator for the first time

The device must be configured and the actuator must be allocated to the safety switch before the system forms a functional unit. During configuration, the function actuator is used to specify the monitoring of the guard locking for process protection as permanently active or as optional. The coding level is also defined. As such, the selection of the actuator determines the function of the device.

Configuration and the teach-in operation occur simultaneously in the delivery state or after a factory reset.

Actuator	Guard lock monitoring for process protection	Coding level
A-FLX-D-OC-167919 	Active	High coding level
A-FLX-D-OD-169044 	Optional	High coding level
A-FLX-D-OE-169045 	Active	Low coding level
A-FLX-D-OF-169046 	Optional	Low coding level

WARNING	
	Danger to life due to improper use During the initial configuration or reconfiguration after a factory reset, ensure that all risk assessment measures for the selected function were performed.
Important!	
	If the actuator to be taught-in is in the actuating range for less than 30 s, the device will not be configured and the actuator will not be taught-in.

Prerequisite:

- The device is in the delivery state. A factory reset must be performed before a preconfigured device can be reconfigured, see 14. *Factory reset*, page 41.
- The device is isolated from the operating voltage.

- Apply operating voltage.
 - The STATE LED flashes white quickly. The device carries out a self-test.
 - The STATE LED flashes white slowly. The device is in unlimited teach-in standby.
- Insert an actuator.
 - The teach-in operation begins. The STATE LED flashes alternately white/violet slowly.
 - The teach-in operation ends after approx. 30 s. The STATE LED flashes alternately green/blue quickly (approx. 3 Hz).
- Switch off operating voltage for at least 3 s.
 - The code of the actuator taught-in is activated in the safety switch. The actuator is valid.
- Switch on operating voltage.
 - The device operates normally.

13.2. Teaching-in new actuator (only for evaluation of the actuator with a high coding level)

Tip	
	Prior to switching on the operating voltage, close the guard on which the actuator to be taught-in is installed. The teach-in operation starts immediately after switching on. This feature simplifies above all teach-in with series connections and on large installations.
Important!	
	- During a teach-in operation, the safety outputs are switched off, i.e. the system is in the safe state. - The safety switch disables the code of the preceding device if teach-in is carried out for a new actuator. Teach-in is not possible again immediately for this device if a new teach-in operation is carried out. The disabled code is enabled again in the safety switch only after a third code has been taught-in. - The safety switch can be operated only with the last actuator taught-in. - The number of teach-in operations is unlimited. - If the actuator to be taught-in is in the actuating range for less than 30 s, it will not be activated and the most recently taught-in actuator will remain saved. The device indicates an error, see 15.3. <i>Error messages</i>, page 45.

Prerequisite:

- The device is isolated from the operating voltage.

1. Make sure there is no actuator in the actuating range.
2. Apply operating voltage.
 - ➔ The STATE LED flashes white quickly (5 Hz). The device carries out a self-test.
 - ➔ The device is in teach-in standby for up to 3 min. The STATE LED illuminates white.
3. Insert an actuator that has not been taught-in.
 - ➔ The teach-in operation begins. The STATE LED flashes alternately white/violet slowly.
 - ➔ The teach-in operation ends after approx. 30 s. The STATE LED flashes alternately green/blue quickly (approx. 3 Hz).
4. Switch off operating voltage for at least 3 s.
 - ➔ The code of the new actuator taught-in is activated in the safety switch. The actuator is valid.
5. Switch on operating voltage.
 - ➔ The device operates normally.

13.3. Functional check

DANGER	
	Danger of fatal injury as a result of faults in installation and the functional check. ▸ Before carrying out the functional check, make sure that there are no persons in the danger area. ▸ Observe the valid accident prevention regulations.

13.3.1. Mechanical function test

The actuator must slide easily into the switch. Close the guard several times to check the function.

13.3.2. Electrical function test

After installation and after any fault, the safety function must be fully checked. Proceed as follows:

If guard lock monitoring for process protection is active:

1. Switch on operating voltage.
 - ➔ The machine must not start automatically.
 - ➔ The safety switch carries out a self-test.
 2. Close all guards. Activate guard locking.
 - ➔ The machine must not start automatically. It must not be possible to open the guard.
 - ➔ The STATE LED illuminates green, the LOCK LED illuminates orange.
 3. Enable operation in the control system.
 - ➔ It must not be possible to release guard locking as long as operation is enabled.
 4. Release guard locking if necessary and open guard.
 - ➔ The machine must switch off and it must not be possible to start it as long as the guard is open.
- Repeat steps 2 - 4 for each guard.

If guard lock monitoring for process protection is optional:

1. Switch on operating voltage.
 - ➔ The machine must not start automatically.
 - ➔ The safety switch carries out a self-test.
 2. Close all guards. As soon as the actuator is inserted into the switch, the safety outputs are switched on independent of the state of the guard locking.
 - ➔ The machine must not start automatically.
 - ➔ The STATE LED illuminates green. In addition, depending on the state of guard locking, the LOCK LED illuminates orange permanently or with a short interruption.
 3. Enable operation in the control system.
 4. Release guard locking if necessary and open guard.
 - ➔ The machine must switch off and it must not be possible to start it as long as the guard is open.
- Repeat steps 2 - 4 for each guard.
- Check each safety guard to ensure that deactivating guard locking will not affect the safety function.


14. Factory reset

A factory reset deletes the configuration and restores the device's factory settings.

To perform a factory reset, connect the two outputs FO1A and FO1B to 0 V before connecting the operating voltage or send the command 0x1E via IO-Link communication, see 12.2. *Acyclical data (device data and events)*, page 36.

15. Status and error messages

15.1. LED displays

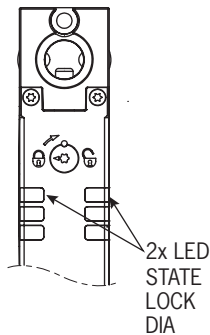

LED	Color
STATE	RGB
LOCK	orange
DIA	red

Important!

If you do not find the displayed device status in the following tables, this indicates an internal device fault. Contact EUCHNER.

Key to symbols			LED not illuminated
			LED illuminated
	quickly		LED flashes quickly (3 Hz)
	slowly		LED flashes slowly (0.6 Hz)
			LEDs flash alternately
	X		Any state


15.2. Status messages

Operating mode	LED indicator		Safety outputs FO1A/ FO1B	Signal Guard locking OL	Signal Door position 1 OD	Status	
	STATE RGB	LOCK orange					
Self-test	 white quickly 3 Hz (CTS-BP: 2 s; CTS-BR: 5 s)	○	off	off	off	Self-test after operating voltage is switched on	
	 green quickly					No communication with the BR/IO-Link Gateway	
Normal operation	 green	 orange	on	on	on		If guard lock monitoring is active: door is closed and locked. The safety outputs of the preceding device in a series connection are switched on.
	 green	 orange slowly	on	off	on		If guard lock monitoring is optional: door is closed. The safety outputs of the preceding device in a series connection are switched on.
	 green slowly	 orange slowly	off	off	on		Door is closed and not locked. The safety outputs of the preceding device in a series connection are switched off.
	 green slowly	○	off	off	off	Door is open.	
	 green slowly	 orange quickly	off	off	off	Door is open and ready for locking.	
	 white/orange slowly	 orange slowly	X	off	X		Guard locking was manually released. The safety outputs are switched off.
							Guard locking was manually released. The safety outputs are switched on as long as the actuator is in the switch.
						The actuator was not inserted fully.	
	 green/red quickly	 orange quickly	X	off	on	The locking element is stuck.	
	 green/orange slowly	X	off	X	X	The predecessor in the series connection is not switched on.	

Operating mode	LED indicator		Safety outputs FO1A/ FO1B	Signal Guard locking OL	Signal Door position 1 OD	Status
	STATE RGB	LOCK orange				
Teach-in operation	 white	○	off	off	X	Device is in teach-in standby, see 13.2. <i>Teaching-in new actuator (only for evaluation of the actuator with a high coding level)</i> , page 39.
	 white slowly			X	X	Device is not configured, see 13.1. <i>Configuring device and teaching-in actuator for the first time</i> , page 38.
	 white/violet slowly			X	off	Teach-in operation. Door is closed.
	 green/blue quickly			X	X	Positive acknowledgment after completion of teach-in operation.
Factory reset	 white/blue quickly	○	off	off	off	Factory reset
Error	depending on the error	depending on the error	off	depending on the error		Error message, see 15.3. <i>Error messages</i> , page 45.

15.3. Error messages

Error code via IO-Link	LED indicator			Error	Troubleshooting	Acknowledge errors	
	STATE RGB	LOCK orange	DIA red			Open/close door	Reset
Teach-in errors							
0x1F	 white/red slowly	○	 red	Actuator removed from the actuating range prior to the end of the teach-in operation.	Check whether the actuator is outside the actuating range or in the limit range.		●
0x25	 blue quickly			Disabled actuator detected during the teach-in operation: The actuator was taught-in during the penultimate teach-in operation and is disabled for the current teach-in operation.	Repeat teach-in operation with new actuator, see 13.2. <i>Teaching-in new actuator (only for evaluation of the actuator with a high coding level)</i> , page 39.		●
0x42	 blue slowly			Invalid actuator detected: The actuator is not intended for the current device configuration.	› Perform the teach-in operation with an actuator intended for the current device configuration. › If the device is to be reconfigured, observe chapter 13.1. <i>Configuring device and teaching-in actuator for the first time</i> , page 38.		●
0x45	 blue			Faulty or incompatible actuator detected: The actuator's data structure cannot be read. The actuator is faulty or is not suitable for the device.	Repeat teach-in operation with new actuator.		●
Input errors							
0x2E	 violet slowly	○	 red	Different signal states at the safety inputs FI1A and FI1B during operation.	› Check wiring. › Check preceding device in the switch chain.	●	
0x30			 red	Different signal states at the safety inputs FI1A and FI1B during the self-test.			●
0x31 0x32			 red	Test pulses not detected at safety input FI1A or FI1B during operation.		●	
0x36 0x37			 red	Test pulses not detected at safety input FI1A or FI1B during the self-test.			●
Output errors							
0x54	 violet quickly	○	 red	A HIGH signal is detected at safety output FO1A or FO1B during the self-test.	Check wiring.		●
			 red	The voltage level at safety outputs FO1A and FO1B during operation does not meet the requirements. External voltage might be present.		●	

Error code via IO-Link	LED indicator			Error	Troubleshooting	Acknowledge errors	
	STATE RGB	LOCK orange	DIA red			Open/close door	Reset
Transponder/read errors							
0x44	 blue slowly	○	 red	Invalid actuator detected during operation: The actuator is not intended for the current device configuration.	Use a valid actuator.	●	
0x46	 blue			Faulty or incompatible actuator detected during operation: The actuator's data structure cannot be read. The actuator is faulty or is not suitable for the device.		●	
0x47	 blue quickly			Disabled actuator detected during operation: The actuator is not the currently valid actuator.		●	
0x48	 white/blue slowly			Actuator not taught-in detected during operation.	- Use the currently valid actuator. - Teach-in actuator.	●	
0x89	 blue/red quickly	X	 red	Possibly mechanically damaged actuator detected during operation.	- Check actuator for any damage. Replace actuator if necessary. - Check whether the actuator is outside the actuating range or in the limit range.		●
Environment errors							
0x60	 orange/red slowly	○	 red	Supply voltage or device temperature too high.	- Observe the specified supply voltage, see 16.1. <i>Technical data for safety switch CTS-C2-BP/BR-FLX</i>, page 48 - Observe the specified temperature range, see 16.1. <i>Technical data for safety switch CTS-C2-BP/BR-FLX</i>, page 48 - Check system configuration: cable length, number of devices in the switch chain.	●	
0x61				Supply voltage or device temperature too low.		●	
0x62			 red	Supply voltage or device temperature too high.			●
0x63				Supply voltage or device temperature too low.			●
Internal fault							
0x01	 red	○	 red	Internal device fault	Restart the device. On repeated occurrence, contact EUCHNER.		●
-	○	○	 red				

15.4. Acknowledging error messages

If the DIA LED flashes inversely once, the error message can be acknowledged by opening and closing the guard. If the error is still displayed afterward, a reset must be performed.

If the DIA LED is permanently illuminated, the error message can be acknowledged only by a reset.

The reset can be performed as follows:

Reset	Centrally for all devices in a chain	Each device must be addressed individually.	Further information
By briefly disconnecting the power supply (at least 3 s)	●	-	-
Via the cyclical data of IO-Link communication	●	-	See operating instructions for the IO-Link Gateway
Via the acyclical data of IO-Link communication	-	●	See 12.2. <i>Acyclical data (device data and events)</i> , page 36

Reset for acknowledging error messages does not delete the configuration.

Important!	
	Contact EUCHNER if the fault display is not reset after briefly disconnecting the power supply.

16. Technical data

NOTICE	
	If a data sheet is available for the product, the information on the data sheet applies.

16.1. Technical data for safety switch CTS-C2-BP/BR-FLX

General	
Material	
- Switch head cover	Die-cast zinc
- Safety switch housing	Reinforced thermoplastic
Installation position	Any
Degree of protection	IP65/IP67/IP69/IP69K (screwed tight with the related mating connector)
Safety class	III
Degree of contamination (external, acc. to EN IEC 60947-1)	3
Mechanical life	1 x 10 ⁶ operating cycles
Ambient temperature at U _B = 24 V	 -20 ... +55 °C
	 -20 ... +50 °C
Humidity at 40 °C, rel., acc. to EN IEC 60068-2-78	Max. 93%
Approach speed	Max. 20 m/min
Actuating force	25 N
Extraction force	25 N
Retention force	10 N
Locking force F _{max}	5,000 N
Locking force F _{Zh}	3,800 N
Connection (depending on version)	- Connecting cable PVC/PUR, 0.14 mm², with 2 plug connectors M12, 5- and 8-pin - Connecting cable PVC/PUR, 0.14 mm², with plug connector M12, 8-pin - Connecting cable PVC/PUR with flying lead, 8 x 0.14 mm² - Connecting cable PVC, 0.14 mm², with 2 plug connectors M12, 5-pin
Operating voltage U _B (reverse polarity protected, regulated, residual ripple < 5%)	24 V DC -15%/+20% (SELV)
Current consumption I _{UB} at U _B = 24 V	50 mA
The following applies to the approval acc. to UL	Operation only with UL Class 2 power supply or equivalent measures
Switching load acc. to UL	24V DC, Class 2
External fuse (operating voltage U _B)	1 ... 8 A
External fuse (solenoid operating voltage U _{MP})	1 ... 8 A
Rated insulation voltage U _i	32 V
Rated impulse withstand voltage U _{imp}	0.8 kV
Rated conditional short-circuit current	100 A
Shock and vibration resistance	Acc. to EN 60947-5-3
EMC protection requirements	Acc. to EN 60947-5-3
Ready delay - CTS-...BP - CTS-...BR	Max. 1 s Max. 5 s
Risk time acc. to EN 60947-5-3	Max. 200 ms
Risk time acc. to EN 60947-5-3, extension for each additional device	10 ms
Turn-on time	Max. 400 ms
Discrepancy time	Max. 10 ms
Test pulse duration	Max. 0.3 ms
Test pulse interval	Min. 96 ms

Safety outputs F01A/F01B	
Output voltage U_{F01A}/U_{F01B} ¹⁾	Semiconductor outputs, p-switching, short circuit-proof
HIGH U_{F01A}/U_{F01B}	$U_B - 4 \dots U_B$ V DC
LOW U_{F01A}/U_{F01B}	0 ... 1 V DC
Output current	1 ... 75 mA
Utilization category	DC-13 24 V 75 mA
	Caution: outputs must be protected with a free-wheeling diode in case of inductive loads.
Switching frequency	Max. 0.2 Hz
Monitoring outputs O _x /C	
Output voltage	$0.8 \times U_B \dots U_B$ V DC
Output current	1 ... 10 mA
Solenoid	
Solenoid operating voltage (reverse polarity protected, regulated, residual ripple < 5%)	24 V DC -15%/+20% (SELV)
Solenoid current consumption I_{IMP}	500 mA
Connection rating	9 W
Solenoid duty cycle	100%
Characteristics acc. to EN ISO 13849-1 and EN IEC 62061	
Category	4
Performance Level (PL)	e
PFH	$6.44 \times 10^{-9}/h$
Maximum SIL	3
Mission time	20 years
Monitoring of the guard position	

²⁾ Values at a switching current of 50 mA without taking into account the cable lengths.

16.1.1. Typical system times

Refer to the technical data for the exact values.

Ready delay: After switch-on, the device carries out a self test. The system is ready for operation only after this time.

Turn-on time of safety outputs: The max. reaction time t_{on} is the time from the moment when the guard is locked to the moment when the safety outputs switch on.

Risk time according to EN 60947-5-3: The risk time is the maximum time until at least one of the safety outputs F01A or F01B switches off safely when the actuator is removed from the actuating range. This also applies if an internal or external fault occurs at this moment.

The following applies to guard lock monitoring for process protection: If an actuator moves outside the actuating range, the safety outputs F01A and F01B are switched off after the risk time at the latest.

If several devices are operated in a series connection, the risk time of the overall device chain will increase with each device added. Use the following calculation formula:

$$t_r = t_{r,e} + (n \times t_l)$$

t_r = Total risk time

$t_{r,e}$ = Risk time for single device (see technical data)

t_l = Risk time extension per device

n = Number of additional devices (total number -1)

Discrepancy time: The safety outputs F01A and F01B switch with a slight time offset. They have the same signal state no later than after the discrepancy time.

Test pulses at the safety outputs: The device generates its own test pulses on the safety outputs F01A and F01B. A downstream control system must tolerate these test pulses.

This can usually be set up in the control systems by parameter assignment. If parameter assignment is not possible for your control system or if shorter test pulses are required, contact the EUCHNER support team.

The test pulses are output only if the safety outputs are switched on.

16.1.2. Radio frequency approvals

FCC ID: 2AJ58-18

IC: 22052-18

FCC/IC-Requirements

This device complies with part 15 of the FCC Rules and with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Unique Identifier:

CTS-C1-BP series

CTS-C1-BR series

CTS-C2-BP series

CTS-C2-BR series


Responsible Party - U.S. Contact Information

EUCHNER USA Inc.

1665 N. Penny Lane
Schaumburg, Illinois 60173

+1 315 701-0315
info(at)euchner-usa.com
<http://www.euchner-usa.com>


16.1.3. Dimension drawing for safety switch CTS...

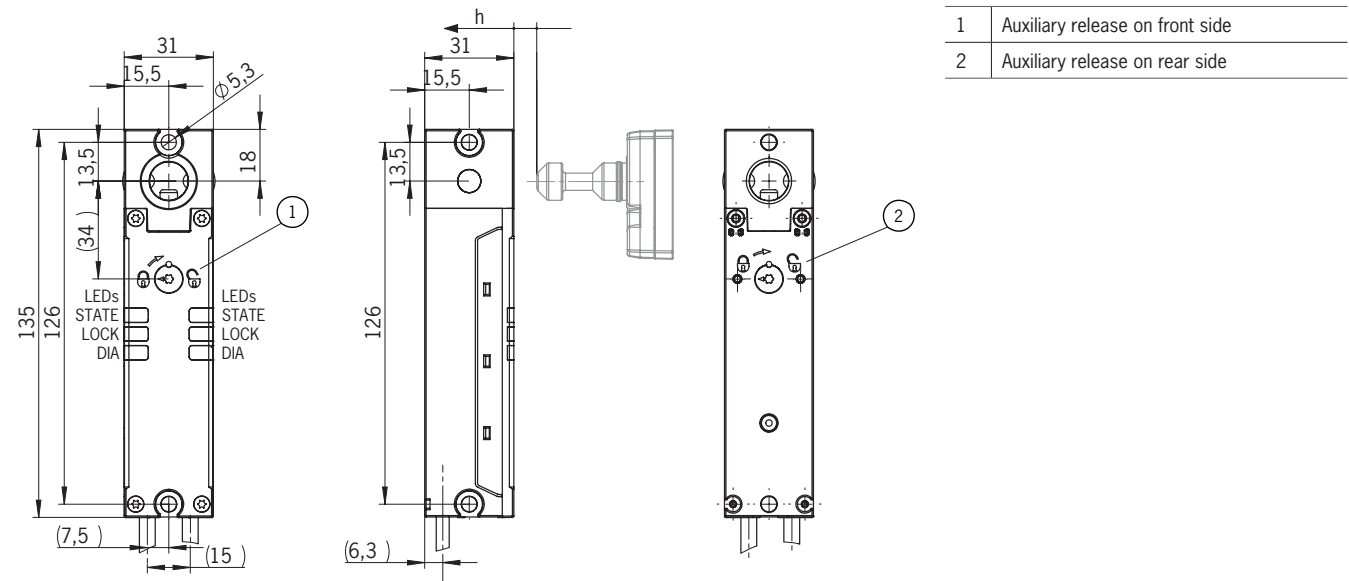

Necessary minimum travel + permissible overtravel

Approach direction	Standard actuator
Horizontal (h)	27+4

16.1.4. Dimension drawing for escape release CTS...

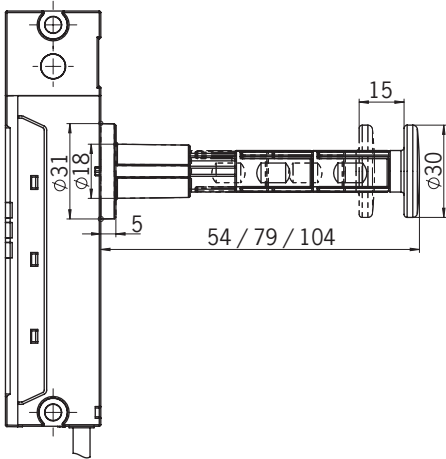


Notice	
	› The actuator shaft for the escape release can be extended using extension pieces. › If extension pieces are used, the guide sleeve supplied must be used.


16.2. Technical data for actuator A-FLX-D-0.-...

General	
Material	
- Mounting	Safety screws, galvanized steel 8.8
- Cover	NBR
- Actuating element	Stainless steel
- Housing	Fiber reinforced plastic, black
Ambient temperature	-20 ... + 55 °C
Degree of protection	IP65/IP67/IP69/IP69K
Mechanical life	1 x 10 ⁶ operating cycles
Locking force, max.	5,000 N
Locking force F_{zh}	3,800 N
Installation position	Any
Overtravel	4 mm
Power supply	Inductive via read head

16.2.1. Dimension drawing for actuator A-FLX-D-0.-...

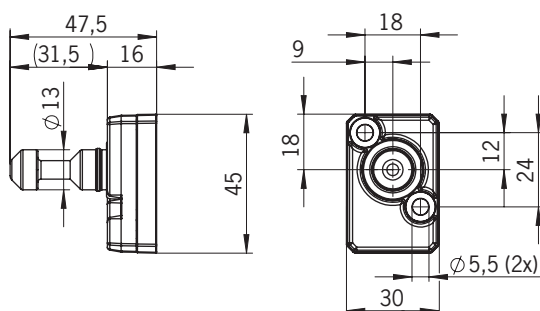

Minimum door radii

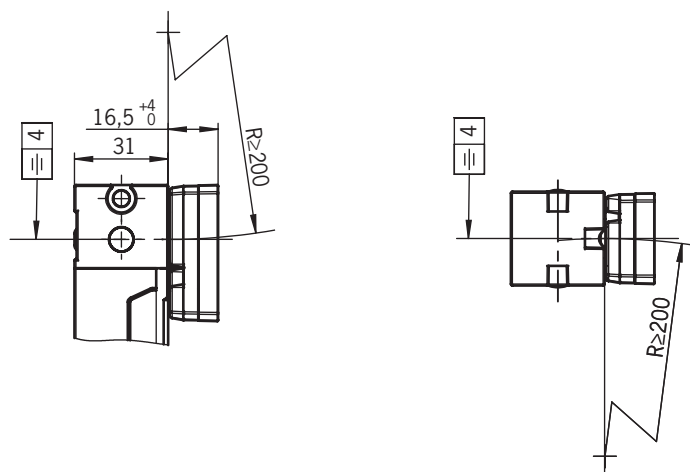

17. Ordering information and accessories

Tip	
	Suitable accessories, e.g. cables or assembly material, can be found at www.euchner.com . To order, enter the order number of your item in the search box and open the item view. Accessories that can be combined with the item are listed in <i>Accessories</i> .

18. Inspection and service

WARNING	
	Danger of severe injuries due to the loss of the safety function. ▸ If damage or wear is found, the complete switch and actuator assembly must be replaced. Replacement of individual parts or assemblies is not permitted. ▸ Check the product for proper function at regular intervals and after every fault. For information about possible time intervals, refer to EN ISO 14119:2025, section 9.2.1.

Regular inspection of the following is necessary to ensure trouble-free long-term operation:

- Check the switching function, see 13.3. *Functional check*, page 40
- Check all additional functions (e.g. escape release, lockout bar, etc.)
- Check the secure mounting of the components and the connections
- Check for contamination.

No servicing is required. Repairs to the device are only allowed to be made by EUCHNER.

19. Disposal



Observe the country-specific regulations when disposing of the device.

For further information, please refer to the *Company/Sustainability* area at www.euchner.com.

20. Service

If servicing is required, please contact:

EUCHNER GmbH + Co. KG
Kohlhammerstraße 16
70771 Leinfelden-Echterdingen
Germany

Service telephone:
+49 711 7597-500

E-mail:
support@euchner.de

Internet:
www.euchner.com

21. Declaration of conformity

The product complies with the following requirements:

- › Machinery Directive 2006/42/EC (until January 19, 2027)
- › Machinery Regulation (EU) 2023/1230 (from January 20, 2027)

The EU declaration of conformity can be found at www.euchner.com. Enter the order number of your device in the search box. The document is available under *Downloads*.

EUCHNER GmbH + Co. KG
Kohlhammerstraße 16
70771 Leinfelden-Echterdingen
Germany
info@euchner.de
www.euchner.com

Edition:
MAN20001531-06-12/25
Title:
Operating Instructions Transponder-Coded Safety Switch
CTS-C2-BP/BR-FLX
(Translation of the original operating instructions)

Copyright:
© EUCHNER GmbH + Co. KG, 12/2025

Subject to technical modifications;
no responsibility is accepted for the accuracy of this information.